



CATALOG OF REPLACEMENT PARTS



HL800 & HL1400 SERIES LEGACY MIXERS (Multi Drive)


ML-141074	HL800
ML-141077	HL800C
ML-141078	HL1400
ML-141081	HL1400C
ML-141111	HL1400N
ML-141113	HL1400N
ML-141114	HL1400N

PRIOR MLS COVERED IN THIS CATALOG

ML-141082	HL1400N
ML-141084	HL1400N
ML-141102	HL1400N

Table of Contents


5	CONTROL PANEL COVER (ML-141077 & ML-141081)
7	CONTROL PANEL
9	ELECTRICAL COMPONENTS (HL800 SERIES)
11	ELECTRICAL COMPONENTS (HL1400 SERIES)
13	BASE AND PEDESTAL
15	APRON AND SLIDEWAYS
17	BOWL SUPPORT (ALL EXCEPT HL1400N SERIES)
19	BOWL SUPPORT (1400N SERIES)
21	TRANSMISSION CASE AND MOTOR
23	TRANSMISSION
25	PLANETARY (HL800 SERIES)
27	PLANETARY (HL1400 SERIES)
31	BOWL GUARD
33	AGITATORS AND ACCESSORIES (40 & 60 QUART)
35	AGITATORS AND ACCESSORIES (80 & 140 QUART)
37	BOWL AND EXTENSIONS
39	BOWL ADAPTER ASSEMBLY (ML-141084)

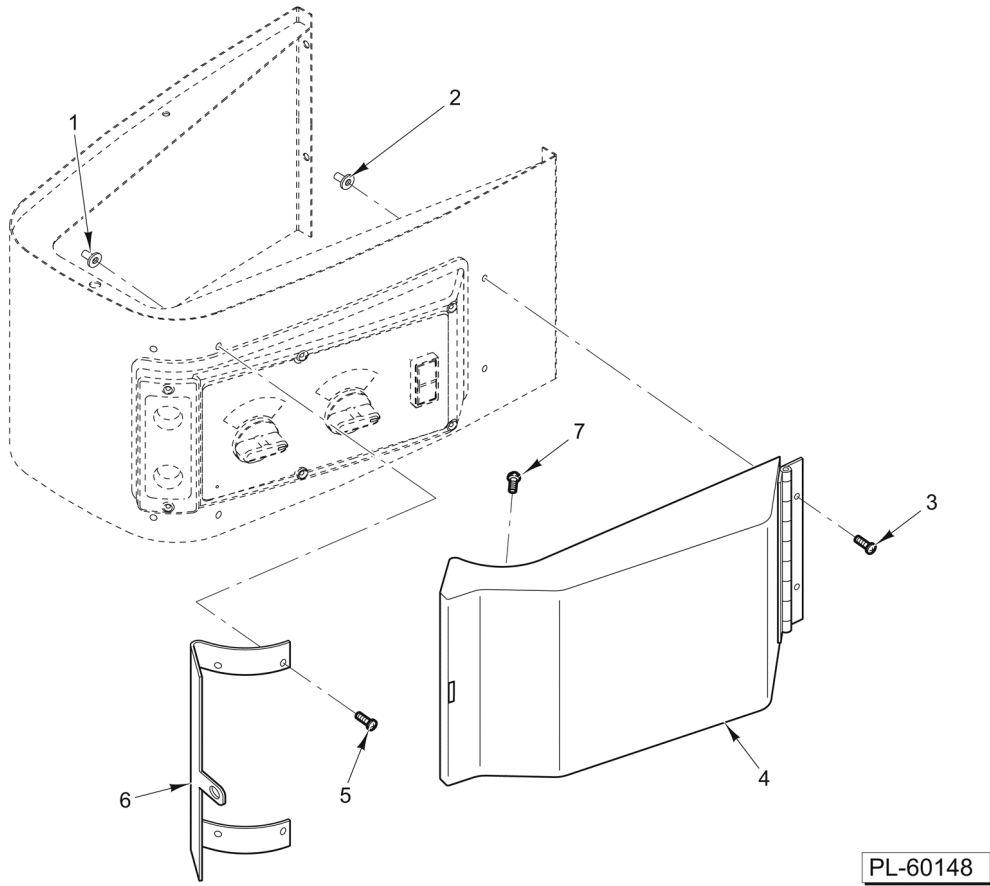

**CONTROL PANEL COVER
(ML-141077 & ML-141081)**


**CONTROL PANEL COVER
(ML-141077 & ML-141081)**

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-60148			
1	00-041960	Insert - Threaded.....	4
2	00-041960	Insert - Threaded.....	2
3	SC-128-74	Mach. Screw 1/4-20 x 5/8 Tx. Button Hd. (SST).....	2
4	00-874526	Cover Assy.....	1
5	SC-128-74	Mach. Screw 1/4-20 x 5/8 Tx. Button Hd. (SST).....	4
6	00-874530	Hasp.....	1
7	SC-100-08	Mach. Screw 1/4-20 x 3/8 Hex Washer Hd.....	1

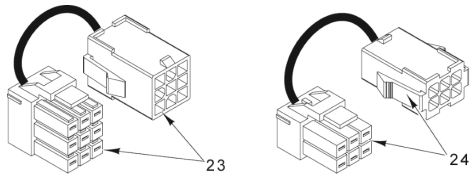

- 25 00-937295 Harness - Switch (Mix & Stop)
- 26 00-937363 Harness - Time Pot
- 27 00-937373 Harness - SPD Speed


PARTS NOT ILLUSTRATED

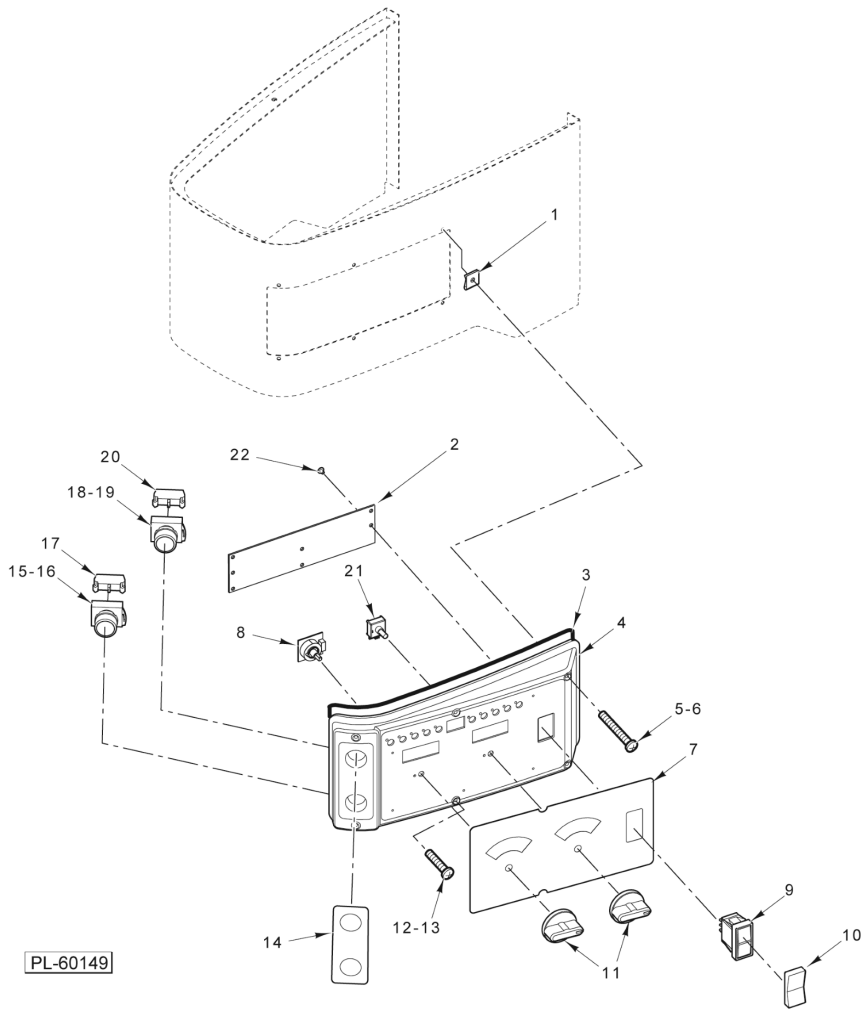

CONTROL PANEL


CONTROL PANEL

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-60149			
1	00-874338	Fastener - Self-Retaining.....	6
2	00-937277	PCB Assy. (Standard Timer).....	1
3	00-875814	Seal - Control Panel.....	1
4	00-917220	Panel - Control.....	1
5	SC-128-40	Mach. Screw 8-32 x 2-1/4 Phil. Oval Hd. (SST).....	2
6	00-874468	Extension - Screw (ML-141077 & ML-141081).....	2
7	00-916231	Overlay (Standard Timer).....	1
8	00-937371	PCB Assy. (Speed Select).....	1
9	00-087711-330-1	Switch - Rocker.....	1
10	00-937533	Switch Cover.....	1
11	00-937364	Knob.....	2
12	SC-128-39	Mach. Screw 8-32 x 1-1/2 Phil. Oval Hd. (SST).....	4
13	SC-128-84	Mach. Screw 8-32 x 1-1/2 Tx. Flat Hd. (SST) (ML-141077 & ML-141081).....	4
14	00-875451	Label (Start/Stop).....	1
15	00-478752-00002	Switch - Operator (Stop).....	1
16	00-937630	Cap - Round Pushbutton Assy.....	1
17	00-087711-322-4	Block - Contact (NC) (Stop).....	1
18	00-478752-00001	Switch - Operator (Start).....	1
19	00-478753-00001	Cap - Round Push Button (Flush).....	1
20	00-087711-322-3	Block - Contact (Start).....	1
21	00-937361	Potentiometer (Timer).....	1
22	SD-039-23	Self-Tapping Screw 6-32 x 1/4 Hex Washer Hd., Type RL.....	3
23	00-937622	Harness - Service Adapter FEM 9P.....	1
24	00-937620	Harness - Service Adapter FEM 6P.....	1
25	00-937295	Harness - Switch (Mix & Stop).....	1
26	00-937363	Harness - Time Pot.....	1
27	00-937373	Harness - SPD Speed.....	1

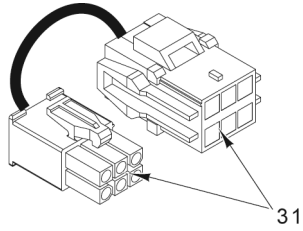

- 32 00-917330-00003 Resistor
- 33 00-917330-00004 Resistor
- 34 00-937318 Harness - Main (Universal)
- 35 00-937949 Harness - Interlock Switch
- 36 00-937387 Harness - Drive

PARTS NOT ILLUSTRATED

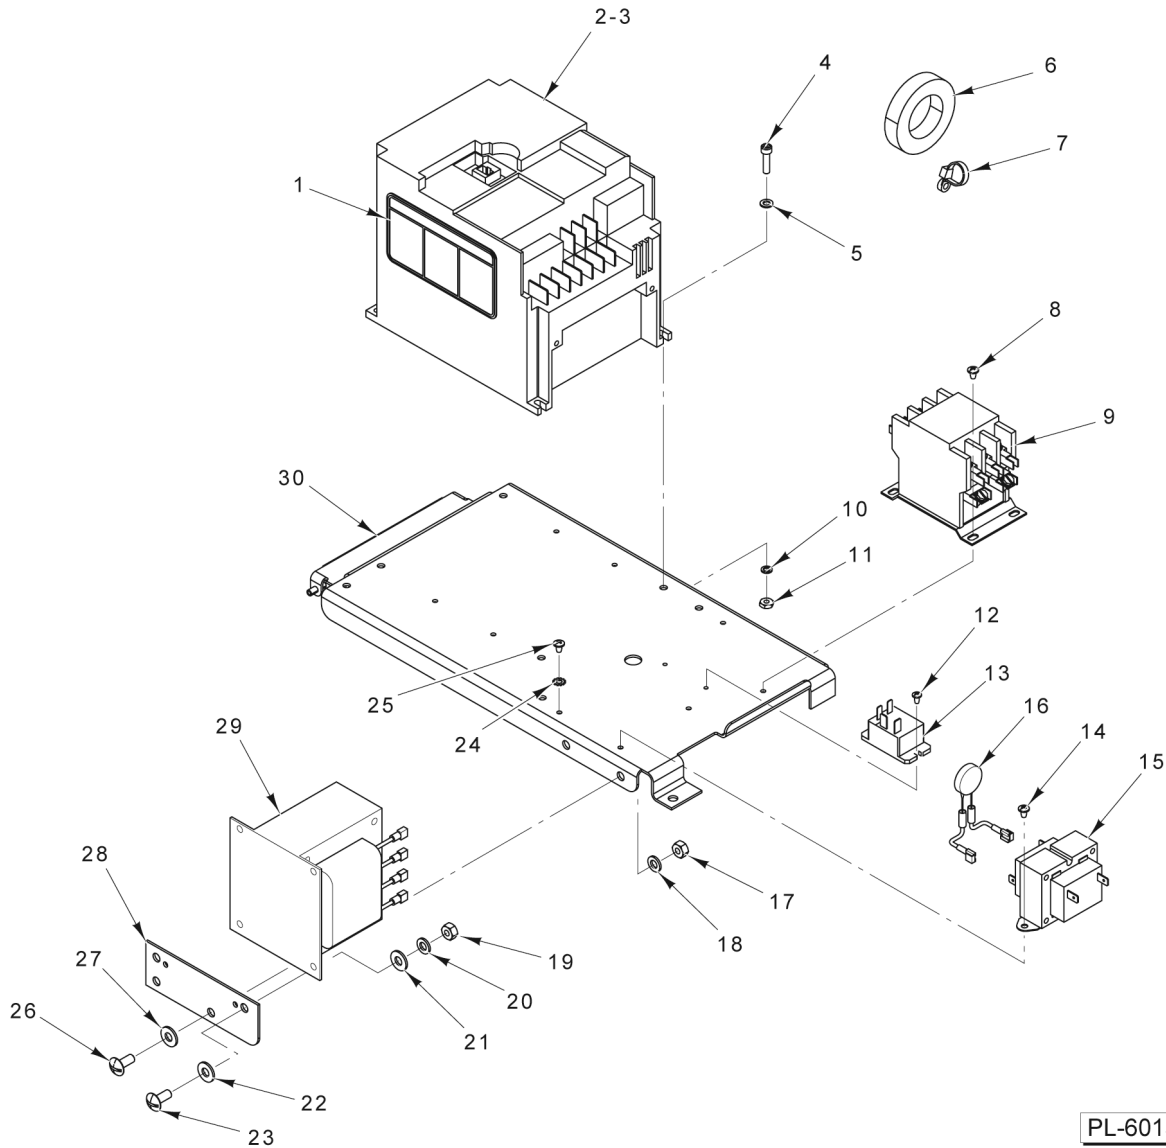


PL-60150


**ELECTRICAL COMPONENTS
(HL800 SERIES)**

**ELECTRICAL COMPONENTS
(HL800 SERIES)**

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-60150			
1	00-438131-00174	Label - Warning.....	1
2	00-937564-00001	Controller (5 Hp.) (Incls. Resistor) (230 V.).....	1
3	00-937564-00002	Controller (5 Hp.) (Incls. Resistor) (460 V.).....	1
4	SC-040-04	Cap Screw 10-32 x 3/4 Hex Socket Hd.....	4
5	WS-002-15	Washer.....	4
6	00-916185-00001	Ferrite.....	1
7	00-113703	Cable Tie.....	1
8	SD-015-39	Self-Tapping Screw 8-32 x 1/4 Phil. Pan Hd., Type TT.....	2
9	00-087713-107-4	Contact (30 Amp./Aux., 3 Ph.).....	1
10	WL-003-22	Lockwasher #10 Light.....	4
11	NS-009-30	Nut 10-32 Hex.....	4
12	SD-015-37	Self-Tapping Screw 6-32 x 1/4 Phil. Pan Hd., Type TT.....	2
13	00-916904-002-1	Relay (1-Pole) (30 Amp.).....	1
14	SD-015-39	Self-Tapping Screw 8-32 x 1/4 Phil. Pan Hd., Type TT.....	2
15	00-294500-00054	Transformer (208-240 V.).....	1
16	00-916176	IC MOV Sub-Assy. (230 V.).....	1
17	NS-013-02	Nut 1/4-20 Hex.....	2
18	WL-003-38	Lockwasher 1/4 Helical.....	2
19	NS-013-02	Nut 1/4-20 Hex.....	2
20	WL-003-38	Lockwasher 1/4 Helical.....	2
21	WS-017-25	Washer.....	2
22	WS-017-25	Washer.....	2
23	SC-120-12	Mach. Screw 1/4-20 x 5/8 Phil. Truss Hd.....	2
24	WL-007-06	Lockwasher #8 External.....	1
25	SD-015-39	Self-Tapping Screw 8-32 x 1/4 Phil. Pan Hd., Type TT.....	1
26	SC-120-12	Mach. Screw 1/4-20 x 5/8 Phil. Truss Hd.....	2
27	WS-017-25	Washer.....	2
28	00-937415	Bracket - Transformer (460 V.).....	1
29	00-294500-050-1	Transformer (460 V.).....	1
30	00-937418	Plate Assy. - Drive Mount.....	1
31	00-937619	Harness - Service Adapter Male 6P.....	1
32	00-917330-00003	Resistor.....	1
33	00-917330-00004	Resistor.....	1
34	00-937318	Harness - Main (Universal).....	AR
35	00-937949	Harness - Interlock Switch.....	1
37	00-937944	Harness - Drive.....	1

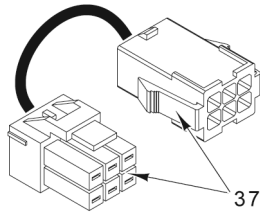

- 38 00-917330-00005 Resistor
 - 39 00-917330-00006 Resistor
 - 40 937318 Harness - Main (Universal)
 - 41 00-937949 Harness - Interlock Switch
 - 42 00-937433 Harness - Drive
- PARTS NOT ILLUSTRATED**

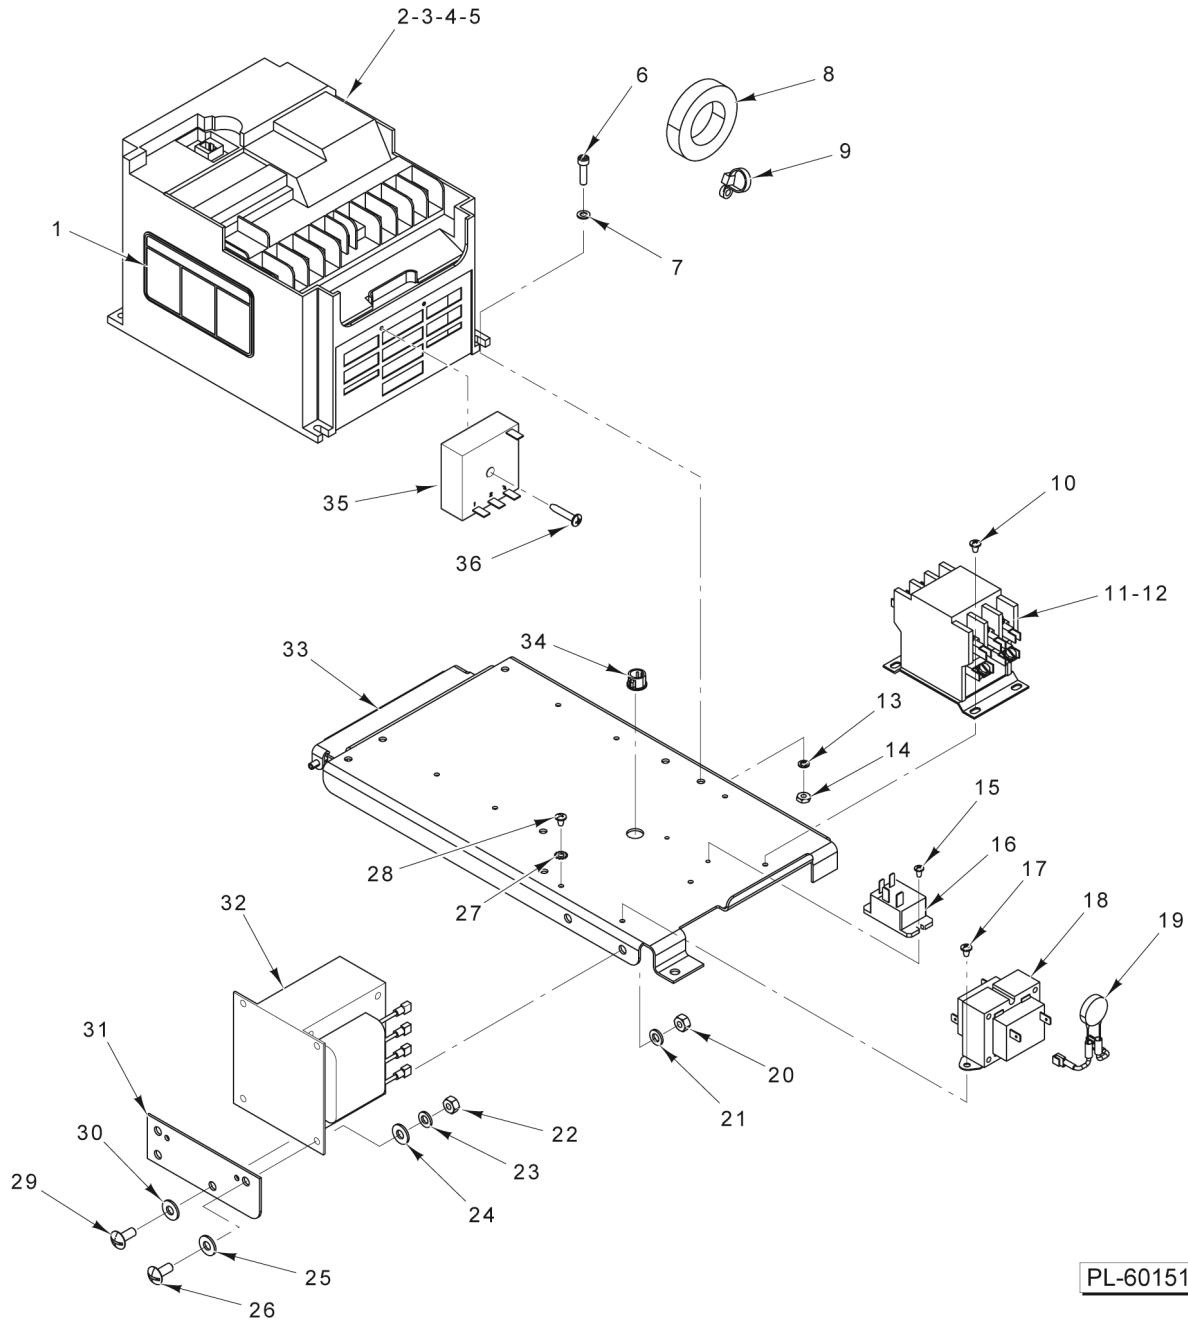


PL-60151

**ELECTRICAL COMPONENTS
(HL1400 SERIES)**

**ELECTRICAL COMPONENTS
(HL1400 SERIES)**

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-60151			
1	00-438131-00174	Label - Warning.....	1
2	00-937333-00001	Controller (10 Hp.) (230 V.).....	1
3	00-937333-00002	Controller (10 Hp.) (460 V.).....	1
4	00-937334-00001	Controller (10 Hp.) (230 V.) (HL1400N Only).....	1
5	00-937334-00002	Controller (10 Hp.) (460 V.) (HL1400N Only).....	1
6	SC-040-04	Cap Screw 10-32 x 3/4 Hex Socket Hd.....	4
7	WS-002-15	Washer.....	4
8	00-916185-00001	Ferrite.....	1
9	00-113703	Cable Tie.....	1
10	SD-015-39	Self-Tapping Screw 8-32 x 1/4 Phil. Pan Hd., Type TT.....	2
11	00-087713-107-4	Contact (30 Amp./Aux., 3 Ph.) (230 V.) (ML-141102, ML-141111, ML-141113, & ML-141114).....	1
12	00-087713-107-5	Contact (30 Amp./Aux., 3 Ph.) (460 V.) (ML-141082 & ML-141084).....	1
13	WL-003-22	Lockwasher #10 Light.....	4
14	NS-009-30	Nut 10-32 Hex.....	4
15	SD-015-37	Self-Tapping Screw 6-32 x 1/4 Phil. Pan Hd., Type TT.....	2
16	00-916904-002-1	Relay (1-Pole) (30 Amp.).....	1
17	SD-015-39	Self-Tapping Screw 8-32 x 1/4 Phil. Pan Hd., Type TT.....	2
18	00-294500-00054	Transformer (208-240 V.).....	1
19	00-916176	IC MOV Sub-Assy. (230 V.).....	1
20	NS-013-02	Nut 1/4-20 Hex.....	2
21	WL-003-38	Lockwasher 1/4 Helical.....	2
22	NS-013-02	Nut 1/4-20 Hex.....	2
23	WL-003-38	Lockwasher 1/4 Helical.....	2
24	WS-017-25	Washer.....	2
25	WS-017-25	Washer.....	2
26	SC-120-12	Mach. Screw 1/4-20 x 5/8 Phil. Truss Hd.....	2
27	WL-007-06	Lockwasher #8 External.....	1
28	SD-015-39	Self-Tapping Screw 8-32 x 1/4 Phil. Pan Hd., Type TT.....	1
29	SC-120-12	Mach. Screw 1/4-20 x 5/8 Phil. Truss Hd.....	2
30	WS-017-25	Washer.....	2
31	00-937415	Bracket - Transformer (460 V.).....	1
32	00-916588	Transformer (460 V.) (ML-141111).....	1
33	00-937418	Plate Assy. - Drive Mount.....	1
34	FE-016-31	Bushing - Snap 3/8.....	1
35	00-916642	Relay - Time Delay (ML-141114).....	1
36	SC-130-90	Mach. Screw M4 x 0.7 x 30mm Slotted Pan Hd.....	1
37	00-937620	Harness - Service Adapter FEM 6P.....	1
38	00-917330-00005	Resistor (230 V.).....	1
39	00-917330-00006	Resistor (460 V.).....	1
40	00-937318	Harness - Main (Universal).....	AR
41	00-937949	Harness - Interlock Switch.....	1
40	00-937944	Harness - Drive.....	1

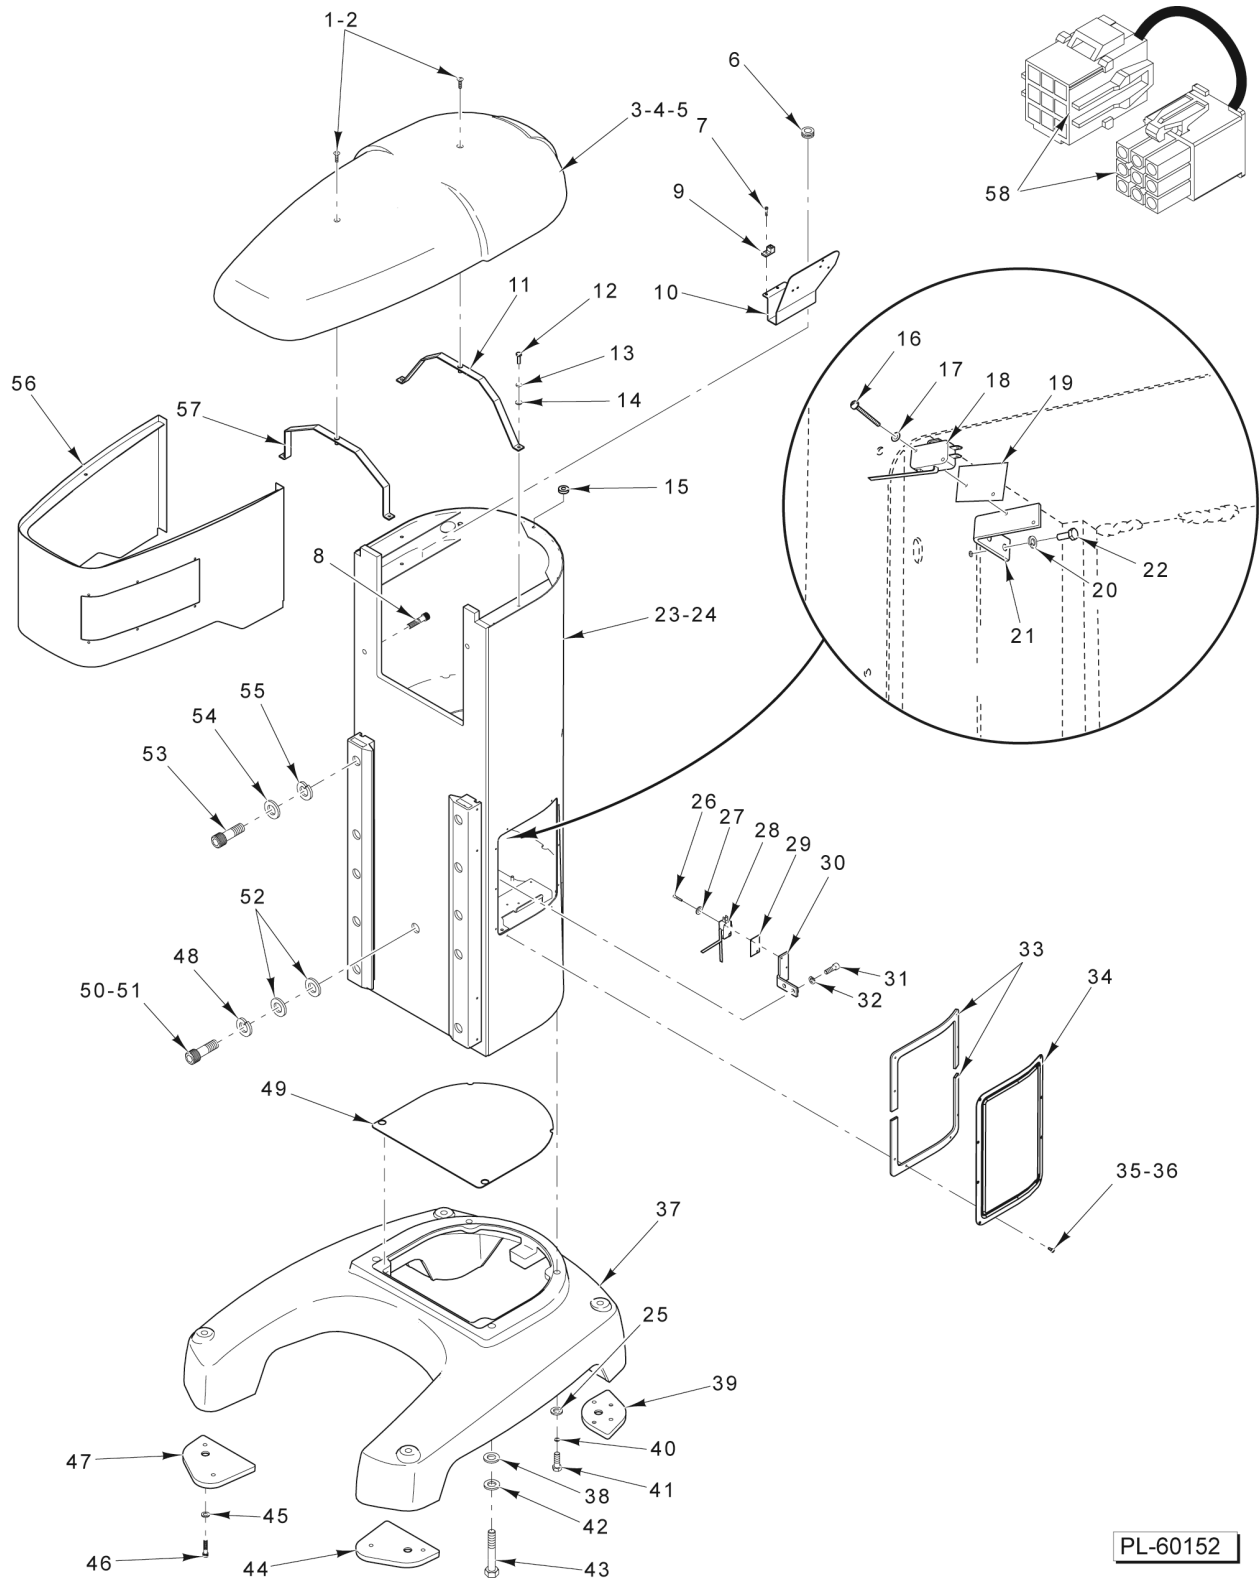


BASE AND PEDESTAL

PL-60152

BASE AND PEDESTAL

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-60152			
1	SC-120-29	Mach. Screw 1/4-20 x 1 Phil. Oval Hd.....	2
2	SC-128-63	Mach. Screw 1/4-20 x 2 Tx. Flat Hd. (SST) (ML-141077 & ML-141081).....	1
3	00-917219	Top - Cover.....	1
4	00-874512-00006	Seal - Top Cover.....	2
5	00-874512-00004	Seal - Top Cover.....	1
6	FE-021-13	Bushing (Nylon) 1/2 I.D.....	1
7	SD-029-02	Self-Tapping Screw 10-24 x 1/2 Slotted Pan Hd., Type F.....	2
8	SC-120-38	Cap Screw 5/16-18 x 1 Hex Hd.....	4
9	00-118544-00001	Lug - Solderless.....	1
10	00-916173	Shield - Wire.....	1
11	00-874571	Strap Assy. - Top Cover.....	1
12	SC-036-06	Cap Screw 1/4-20 x 1 Hex Hd.....	5
13	WL-003-38	Lockwasher 1/4 Helical.....	4
14	WS-003-43	Washer.....	4
15	FE-024-23	Bushing - Electrical (Snap).....	1
16	SC-060-40	Mach. Screw 4-40 x 5/8 Slotted Rd. Hd.....	2
17	WL-003-03	Lockwasher #4 Helical.....	2
18	00-087711-00248	Switch - Bowl Height.....	1
19	00-873376	Insulator.....	1
20	WL-003-38	Lockwasher 1/4 Helical.....	2
21	00-874578	Bracket - Bowl Height Switch.....	1
22	SC-089-02	Cap Screw 1/4-20 x 3/4 Hex Socket Hd.....	2
23	00-916056-00002	Pedestal (HL800 Series).....	1
24	00-916051-00002	Pedestal (HL1400 Series).....	1
25	WS-008-04	Washer.....	2
26	SC-060-40	Mach. Screw 4-40 x 5/8 Slotted Rd. Hd.....	2
27	WL-003-03	Lockwasher #4 Helical.....	2
28	00-087711-00248	Switch - Bowl Down Limit.....	1
29	00-873376	Insulator.....	1
30	00-873371	Bracket - Down Limit Switch.....	1
31	SC-089-02	Cap Screw 1/4-20 x 3/4 Hex Socket Hd.....	2
32	WL-003-38	Lockwasher 1/4 Helical.....	2
33	00-875815	Seal - Side Panel.....	2
34	00-937159-00001	Cover - Side (Incls. Item 33).....	1
35	SD-015-40	Self-Tapping Screw 8-32 x 3/8 Phil. Pan Hd., Type TT.....	8
36	SC-128-66	Mach. Screw 8-32 x 3/8 Tx. Button Hd. (SST) (ML-141077 & ML-141081).....	8
37	00-873960-003-2	Base.....	1
38	WS-030-85	Washer.....	6
39	00-874149	Pad - Foot (Rear).....	2
40	WL-004-11	Lockwasher 1/2 Helical.....	2
41	SC-037-01	Cap Screw 1/2-13 x 1-1/2 Hex Hd.....	2
42	WL-004-19	Lockwasher 5/8 Helical.....	2
43		Cap Screw 5/8-11 x 31/4 Hex Hd.....	2
44	00-874150	Pad - Foot (Left).....	2
45	WS-005-49	Washer.....	8
46	SC-110-03	Cap Screw 3/8-16 x 3/4 Hex Socket Hd.....	8
47	00-874153	Pad - Foot (Right).....	1
48	WL-004-11	Lockwasher 1/2 Helical (ML-141074, ML-141077, ML-141078, & ML-141081).....	1
49	00-874327	Plate - Pedestal Bottom.....	1
50	SC-110-55	Cap Screw 1/2-20 x 1-1/4 Socket Hex Hd. (ML-141074, ML-141077, ML-141078, & ML-141081).....	1
51	SC-131-09	Set Screw 1/2-20 x 1/2 Hex Hdls., SL Cup Pt. (HL1400N Series).....	1
52	WS-008-04	Washer (ML-141074, ML-141077, ML-141078, & ML-141081).....	2
53	SC-040-69	Cap Screw 1/2-20 x 2 Hex Socket Hd.....	10
54	WL-004-11	Lockwasher 1/2 Helical.....	10
55	WS-008-04	Washer.....	10
56	00-875860	Wrapper Assy. - Transmission.....	1
57	00-874569	Strap Assy. - Top Cover.....	1
58	00-937621	Harness - Service Adapter Male 9P.....	1

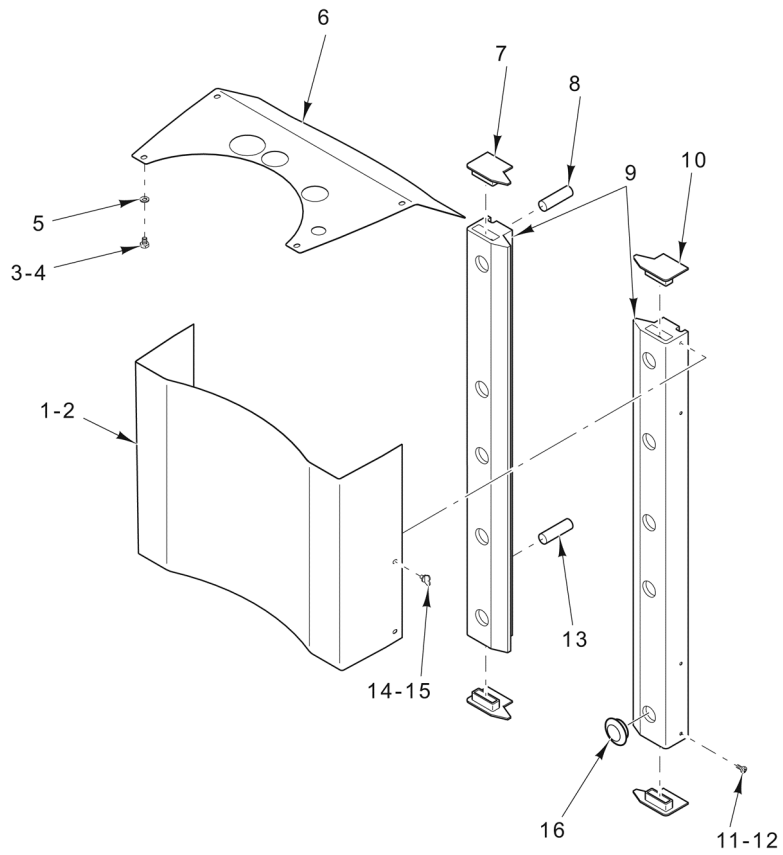

PL-60181


APRON AND SLIDEWAYS

APRON AND SLIDEWAYS

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-60181			
1	00-916087	Apron - Back (HL800 Series).....	1
2	00-916088	Apron - Back (HL1400 Series).....	1
3	SC-041-86	Cap Screw 1/4-20 x 3/8 Hex Hd. (SST).....	4
4	SC-128-80	Mach. Screw 1/4-20 x 3/8 Tx. Button Hd. (SST) (ML-141077 & ML-141081).....	4
5	WL-003-38	Lockwasher 1/4 Helical.....	4
6	00-874597	Apron - Top.....	1
7	00-479619	Cap - Slideway.....	2
8	00-011800-00143	Pin - Dowel 1/2 x 1-3/4 SAE.....	1
9	00-479598	Slideway.....	2
10	00-479618	Cap - Slideway.....	2
11	SC-128-12	Mach. Screw 10-24 x 1/4 Phil. Pan Hd. (SST).....	4
12	SC-128-69	Mach. Screw 10-24 x 3/8 Tx. Button Hd. (ML-141077 & ML-141081).....	4
13	00-011800-00143	Pin - Dowel 1/2 x 1-3/4 SAE.....	1
14	00-070641-00009	Thumb Screw.....	4
15	SC-128-69	Mach. Screw 10-24 x 3/8 Tx. Button Hd. (ML-141077 & ML-141081).....	4
16	PB-005-11	Plug - Button.....	10

55 00-874139 Handle Assy. - Bowl Lock
 56 00-937436 Harness - Interlock Switch


PARTS NOT ILLUSTRATED

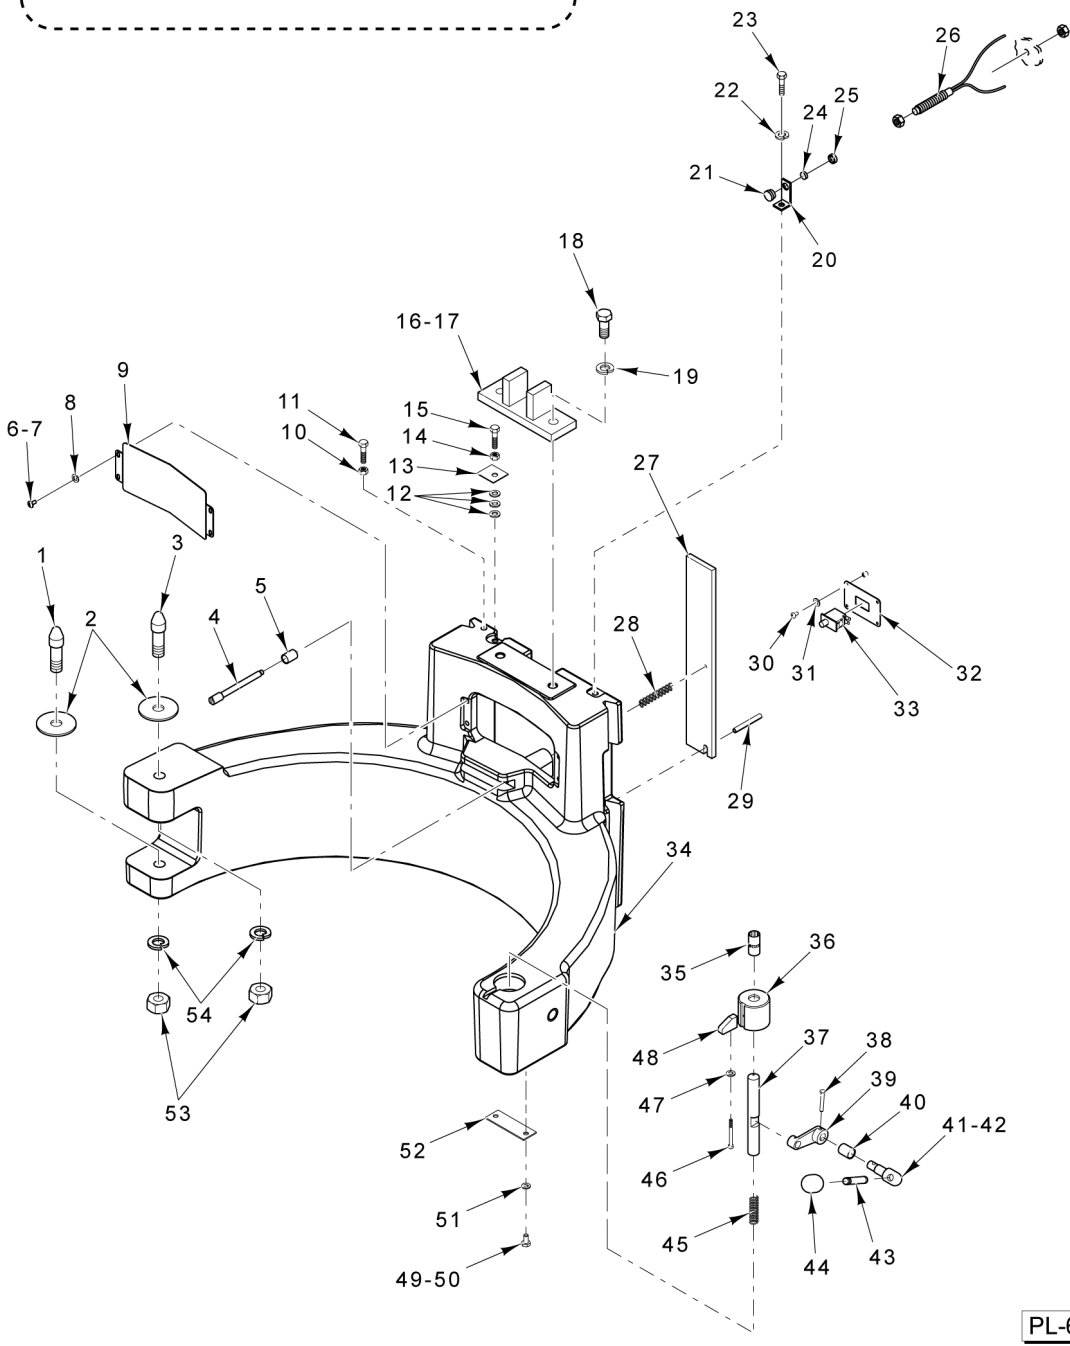

**BOWL SUPPORT
 (ALL EXCEPT HL1400N SERIES)**

**BOWL SUPPORT
(ALL EXCEPT HL1400N SERIES)**


ILLUS.	PART NO.	NAME OF PART	AMT.
PL-60153			
1	00-916021	Pin - Bowl.....	1
2	00-916022	Bushing - Bowl Support.....	2
3	00-916351	Pin - Upper Bowl.....	1
4	00-874387	Pin - Limit.....	1
5	00-874492	Bushing - Bowl-In.....	1
6	SC-128-96	Mach. Screw 8-32 x 3/8 Phil. Truss Hd. (SST) (ML-141074 & ML-141078).....	4
7	SC-121-71	Mach. Screw 8-32 x 3/8 Tx. Button Hd. (ML-141077 & ML-141081).....	4
8	WL-006-02	Lockwasher #8 Helical (SST).....	4
9	00-916605	Shield - Yoke.....	1
10	NS-013-14	Nut 5/16-18 Hex.....	1
11	SC-036-40	Cap Screw 5/16-18 x 1-1/4 Hex Hd.....	1
12	WS-006-36	Washer.....	3
13	00-916359	NLA - Obsolete--Plate - Stop Bowl Travel.....	1
14	NS-013-14	Nut 5/16-18 Hex.....	1
15	SC-036-40	Cap Screw 5/16-18 x 1-1/4 Hex Hd.....	1
16	00-873352-00003	Actuator - Bracket (HL800 Series).....	1
17	00-873352-00002	Actuator - Bracket (HL1400 Series).....	1
18	SC-062-88	Cap Screw 1/2-13 x 1-1/4 Hex Hd.....	2
19	WL-004-11	Lockwasher 1/2 Helical.....	2
20	00-916079	Bracket - Magnet.....	1
21	00-917358	Holder - Magnet (Lower).....	1
22	WL-003-44	Lockwasher 5/16 Helical.....	1
23	SC-087-23	Cap Screw 5/16-18 x 1/2 Hex Socket Hd.....	1
24	00-874875	Magnet - Disc.....	1
25	00-917357	Holder - Magnet (Upper).....	1
26	00-087711-00352	Switch - Reed.....	1
27	00-874566-00002	Plate - Bowl In Switch.....	1
28	00-873377	Spring - Bowl Pin.....	1
29	RP-004-28	Pin - Roll 0.250.....	1
30	SC-018-33	Mach. Screw 8-32 x 5/16 Phil. Pan Hd.....	2
31	WL-003-12	Lockwasher #8 Helical.....	2
32	00-874479	Plate - Bowl In Switch.....	1
33	00-087711-00338	Switch - Panel Front.....	1
34	00-873337	Yoke - Bowl.....	1
35	00-874390	Bushing - Bowl Lock.....	1
36	00-874376	Button - Bowl Rest.....	1
37	00-874391	Pin - Bowl.....	1
38	00-874388	Detent - Clevis Pin.....	1
39	00-874218	Clevis - Bowl Lock.....	1
40	00-874138	Bushing - Bowl Pin Cam.....	1
41	00-874220	Handle - Bowl Pin.....	1
42	00-874139-00002	Handle Assy. - Bowl Lock (ML-141077 & ML-141081) (Items 41, 43, & 44 Welded)	1
43	00-874197	Shaft - Bowl Pin Handle.....	1
44	00-875356	Handle - Lift Lever.....	1
45	00-874198	Spring - Bowl Pin.....	1
46	SC-092-27	Cap Screw 8-32 x 1-3/4 Hex Socket Hd.....	1
47	WL-003-12	Lockwasher #8 Helical.....	1
48	00-874380	Ramp - Wear.....	1
49	SC-036-14	Cap Screw 1/4-20 x 1/2 Hex Hd. (ML-141074 & ML-141078).....	2
50	SC-121-72	Mach. Screw 1/4-20 x 1/2 Tx. Button Hd. (SST) (ML-141077 & ML-141081).....	2
51	WL-003-38	Lockwasher 1/4 Helical.....	2
52	00-874199	Strap - Spring Retaining.....	1
53	NS-013-40	Nut 5/8-11 Hex.....	2
54	WL-004-18	Lockwasher 5/8 Light.....	2
55	00-874139	Handle Assy. - Bowl Lock (Incls. Items 41, 43, & 44).....	1
56	00-937436	Harness - Interlock Switch.....	1

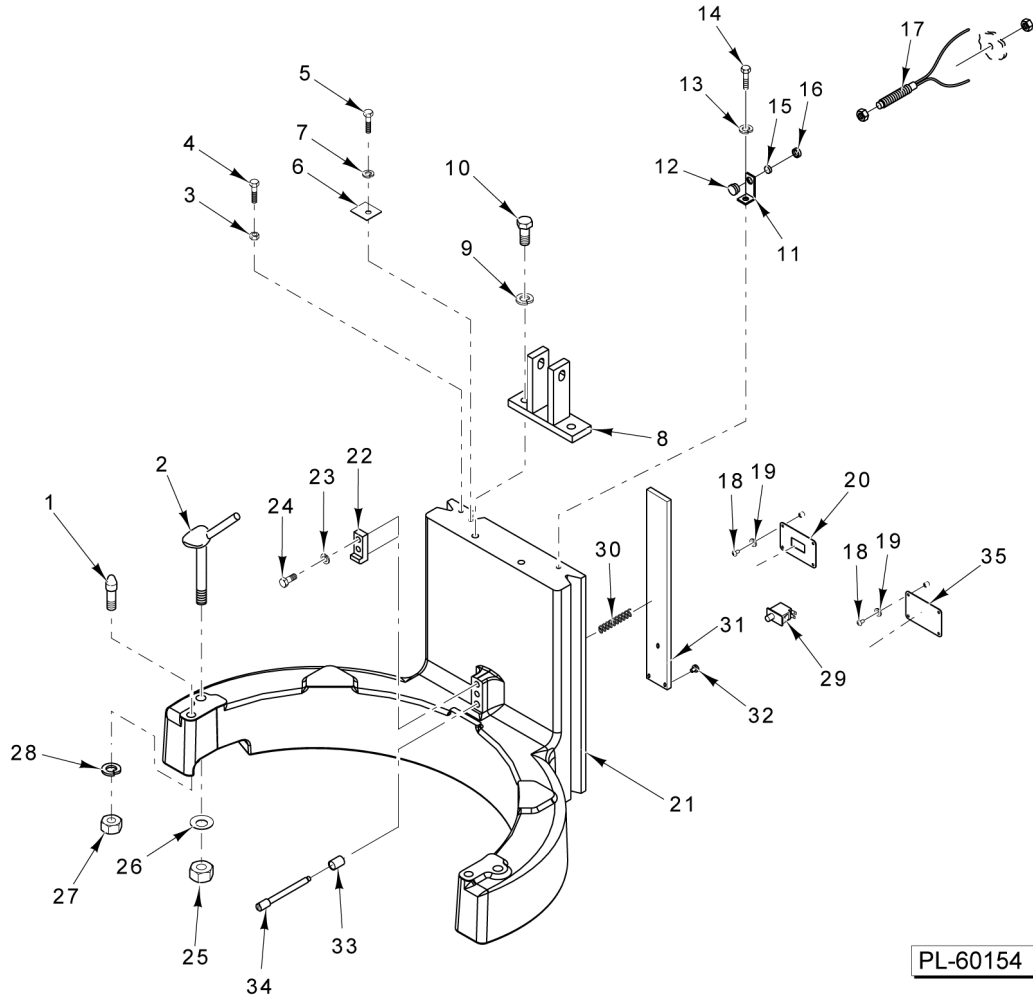

**BOWL SUPPORT
(1400N SERIES)**

**BOWL SUPPORT
(1400N SERIES)**

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-60154			
1	00-019195-00001	Stud - Bowl Locating.....	2
2	00-065922-00020	Bowl Clamp Assy.....	2
3	NS-013-14	Nut 5/16-18 Hex.....	1
4	SC-036-40	Cap Screw 5/16-18 x 1-1/4 Hex Hd.....	1
5	SC-041-09	Cap Screw 5/16-18 x 1/2 Hex Hd. (SST).....	1
6	00-916359	NLA - Obsolete--Plate - Stop Bowl Travel.....	1
7	WL-003-44	Lockwasher 5/16 Helical.....	3
8	00-873352-00002	Actuator - Bracket.....	1
9	WL-004-11	Lockwasher 1/2 Helical.....	2
10	SC-062-88	Cap Screw 1/2-13 x 1-1/4 Hex Hd.....	2
11	00-916079	Bracket - Magnet.....	1
12	00-917358	Holder - Magnet (Lower).....	1
13	WL-003-44	Lockwasher 5/16 Helical.....	1
14	SC-087-23	Cap Screw 5/16-18 x 1/2 Hex Socket Hd.....	1
15	00-874875	Magnet - Disc.....	1
16	00-917357	Holder - Magnet (Upper).....	1
17	00-087711-00352	Switch - Reed.....	1
18	SC-018-33	Mach. Screw 8-32 x 5/16 Phil. Pan Hd.....	2
19	WL-003-12	Lockwasher #8 Helical.....	2
20	00-874479	Plate - Bowl In Switch (ML-141111, ML-141113, & ML-141114).....	1
21	00-917198	Yoke - Bowl.....	1
22	00-064394-00002	Retainer - Bowl.....	1
23	WL-004-02	Lockwasher 3/8 Helical.....	2
24	SC-040-23	Cap Screw 3/8-16 x 1-1/4 Hex Socket Hd.....	2
25	NS-046-18	Lock Nut 5/8-11 Hex Nylok.....	1
26	00-064636	Washer - Bowl Clamp.....	2
27	NS-013-30	Nut 1/2-13 Hex.....	1
28	WL-006-36	Lockwasher 1/2 Helical.....	2
29	00-087711-00338	Switch - Panel Front.....	1
30	00-873377	Spring - Bowl Pin (ML-141111, ML-141113, & ML-141114).....	1
31	00-937604	Bar - Bowl-In Switch (ML-141111, ML-141113, & ML-141114).....	1
32	00-915308	Plug - Rulon (ML-141111, ML-141113, & ML-141114).....	2
33	00-874492	Bushing - Bowl-In (ML-141111, ML-141113, & ML-141114).....	1
34	00-874387	Pin - Limit (ML-141111, ML-141113, & ML-141114).....	1
35	00-874479-00002	Plate (ML-141082, ML-141084, & ML-141102).....	1
36	00-937436-00003	Harness - Interlock Switch.....	1

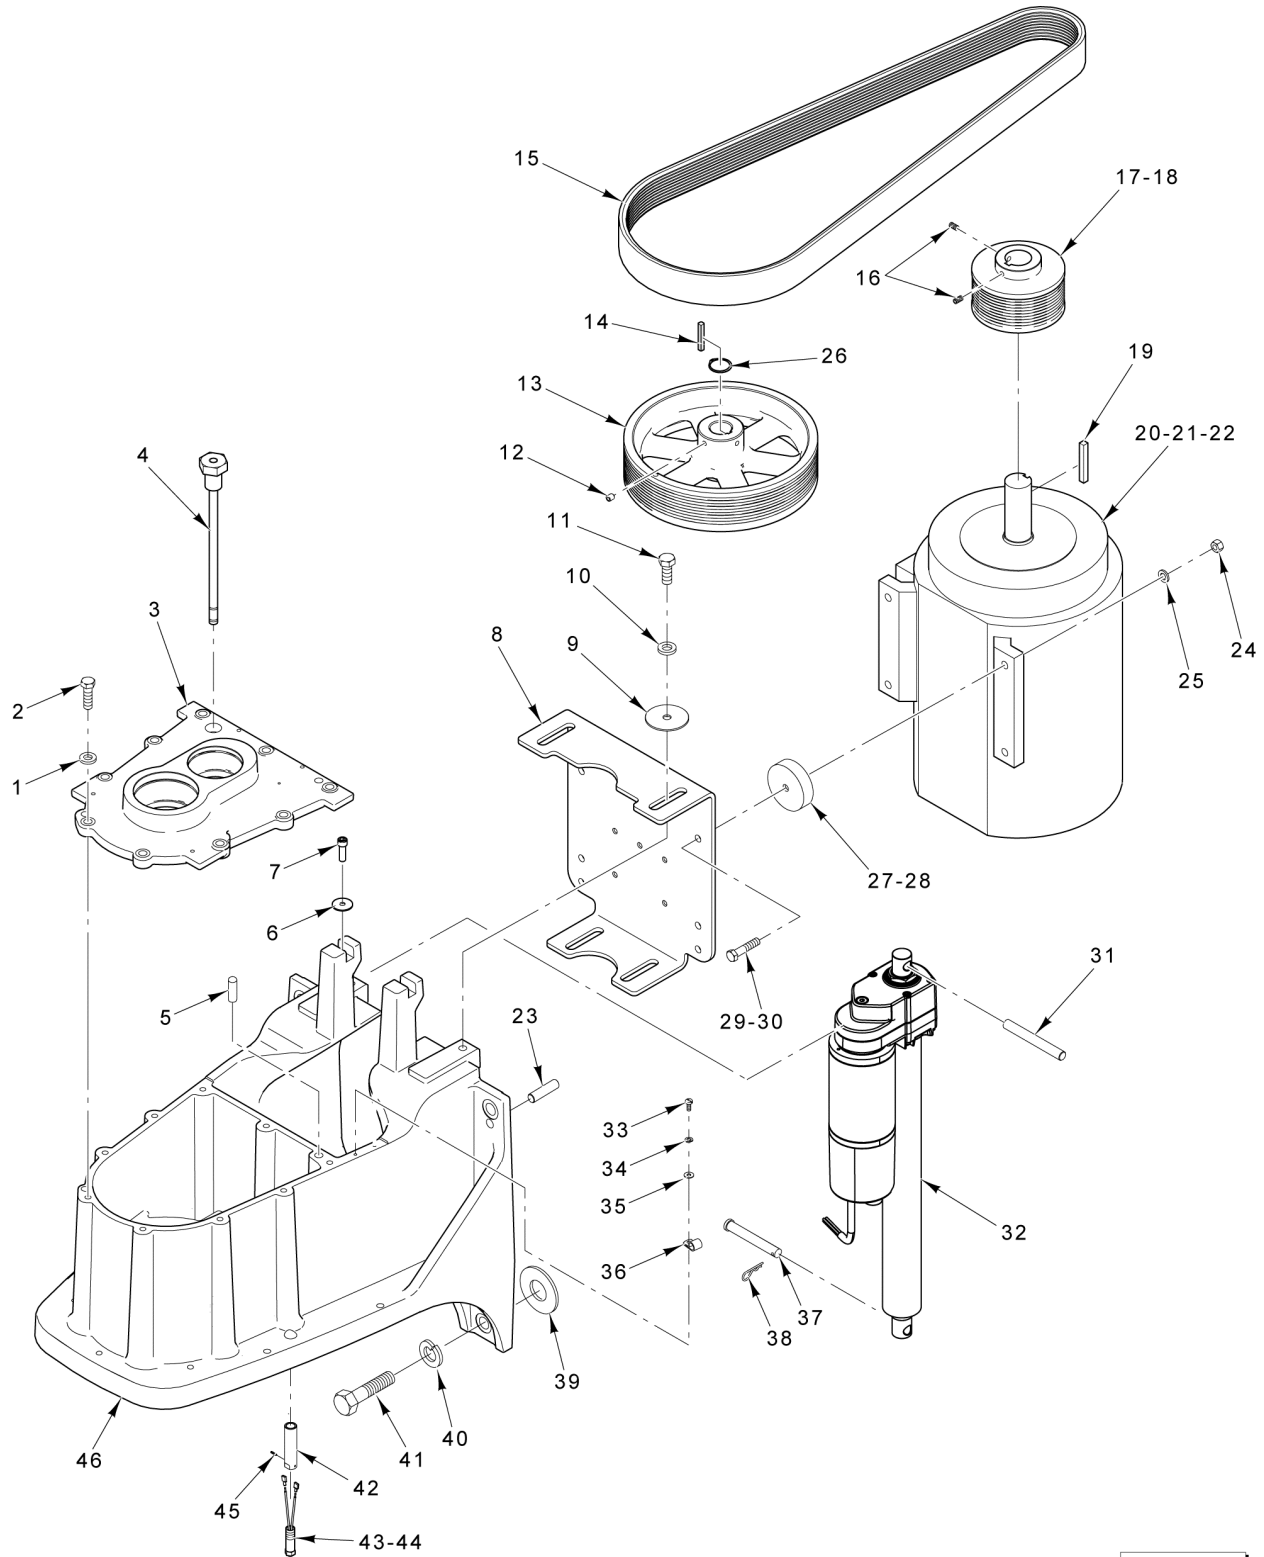


PL-60155

TRANSMISSION CASE AND MOTOR

TRANSMISSION CASE AND MOTOR

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-60155			
1	WL-019-09	Lockwasher 3/8 Helical.....	9
2	SC-118-09	Cap Screw 3/8-16 x 1-1/4 Hex Hd.....	9
3	00-874653	Cover - Transmission.....	1
4	00-916182	Dipstick - Weldment.....	1
5	00-557555	NLA - Obsolete--Dowel.....	2
6	00-916352	Washer - Flat.....	2
7	SC-040-15	Cap Screw 5/16-18 x 1-1/4 Hex Socket Hd.....	2
8	00-874441-00002	NLA - Obsolete--Plate - Motor Mounting.....	1
9	WS-008-40	Washer.....	4
10	WL-019-11	Lockwasher 1/2 Helical.....	4
11	SC-062-88	Cap Screw 1/2-13 x 1-1/4 Hex Hd.....	4
12	SC-075-15	Set Screw 5/16-18 x 3/8 Hex Hdls., Cup Pt.....	2
13	00-916003	Sheave - Driven (10L).....	1
14	00-875419-00069	Key - Chamfered.....	1
15	00-874493	Belt.....	1
16	SC-075-15	Set Screw 5/16-18 x 3/8 Hex Hdls., Cup Pt.....	2
17	00-875805	Sheave - Drive (HL1400 Series).....	1
18	00-875939	Sheave - Drive (HL800 Series).....	1
19	00-875419-00081	Key 5/16 x 5/16 x 2-3/8.....	1
20	00-875995-00002	Motor Assy. (HL800 Series).....	1
21	00-875993-00002	Motor Assy. (ML-141078, ML-141081 & ML-141113).....	1
22	00-916869-00001	Motor Assy. (HL1400N Series).....	1
23	00-508208	Pin - Dowel.....	2
24	NS-013-22	Nut 3/8-16 Hex.....	4
25	WL-004-06	Lockwasher 3/8 Helical.....	4
26	RR-007-02	Retaining Ring.....	1
27	00-875940	NLA - Obsolete--Spacer (HL800 Series).....	4
28	00-873363	NLA - Obsolete--Spacer (HL1400 Series).....	4
29	SC-118-08	Cap Screw 3/8-16 x 1-3/4 Hex Hd. (HL800 Series).....	4
30	SC-124-91	Cap Screw 3/8-16 x 2-1/2 Hex Hd. (HL1400 Series).....	4
31	00-874315	Pin - Actuator (Upper).....	1
32	00-937426	Actuator Assy.....	1
33	SC-018-20	Mach. Screw 10-24 x 1/2 Slotted Pan Hd.....	2
34	WL-003-22	Lockwasher #10 Light.....	2
35	WS-002-51	Washer.....	2
36	00-078752-00012	Clamp (3/8 In.).....	1
37	00-874117-00002	Pin - Clevis.....	1
38	PC-003-50	Cotter Pin 7/64 x 1 Lg.....	1
39	00-072992-00001	Shim - Transmission Case (0.010 Thk.).....	AR
40	WL-004-19	Lockwasher 5/8 Helical.....	4
41	SC-129-34	Cap Screw 5/8-11 x 1-1/2 Hex Hd.....	4
42	00-874128	Extension - Bowl Guard Switch.....	1
43	00-874958-00004	Switch - Reed & Extension (All except ML-141102 & ML-141114).....	1
44	00-874958-00005	Switch - Reed (ML-141102 & ML-141114).....	1
45	SC-075-14	Set Screw 6-32 x 1/8 Hex Hdls., Cup Pt.....	1
46	00-874641	Case - Transmission.....	1

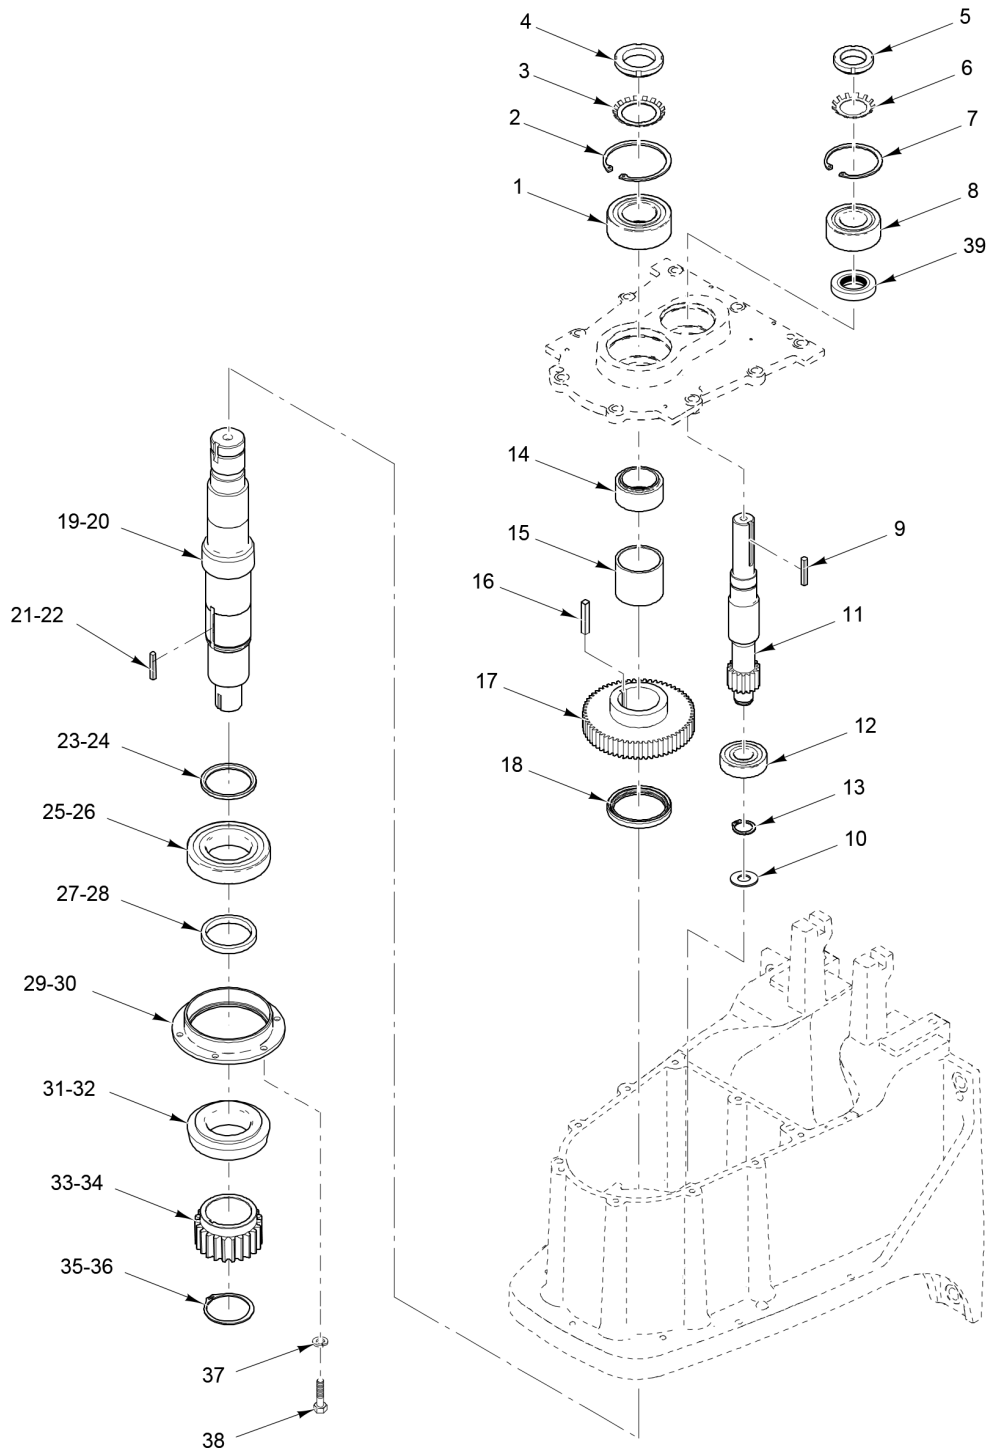


PL-60156

TRANSMISSION

TRANSMISSION

ILLUS. PL-60156	PART NO.	NAME OF PART	AMT.
1	BB-021-59	Bearing - Ball.....	1
2	RR-012-21	Retaining Ring.....	1
3	WL-012-10	Lockwasher.....	1
4	NS-034-10	Lock Nut.....	1
5	NS-034-08	Lock Nut - N.D. #N-07.....	1
6	WL-012-08	Lockwasher.....	1
7	RR-004-24	Retaining Ring.....	1
8	BB-021-56	Bearing - Ball.....	1
9	00-875419-00069	Key - Chamfered.....	1
10	SL-005-17	Spring - Wave.....	1
11	00-916178	Shaft - Input.....	1
12	BB-018-22	Bearing - Ball.....	1
13	RR-009-07	Retaining Ring.....	1
14	00-874564	Spacer - Upper (Without Att. Hub).....	1
15	00-874565	Spacer - Lower (Without Att. Hub).....	1
16	00-875419-00079	Key 5/16 x 5/16 x 1-1/2.....	1
17	00-874448	Gear.....	1
18	00-874454	Seal - Oil.....	1
19	00-875855	Shaft - Planetary (HL800 Series).....	1
20	00-874452	Shaft - Planetary (HL1400 Series).....	1
21	00-875419-00078	Key - Chamfered (HL800 Series).....	1
22	00-875419-00066	Key - Chamfered (HL1400 Series).....	1
23	00-064467	Spacer - Upper (Lower Planetary) (HL800 Series).....	1
24	00-067900	Spacer - Upper (Lower Planetary) (HL1400 Series).....	1
25	BB-007-07	Bearing - Ball Sgl. Rod (HL800 Series).....	1
26	BB-021-49	Bearing - Ball Sgl. Rod (HL1400 Series).....	1
27	00-875858	Spacer - Lower (Lower Planetary) (HL800 Series).....	1
28	00-874567	Spacer - Lower (Lower Planetary) (HL1400 Series).....	1
29	00-875857	Carrier - Lower Bearing (HL800 Series).....	1
30	00-874451	Carrier - Lower Bearing (HL1400 Series).....	1
31	BR-002-14	Roller Bearing - Cup & Cone Assy. (HL800 Series).....	1
32	BR-002-31	Roller Bearing - Cup & Cone Assy. (HL1400 Series).....	1
33	00-064386	Gear - Sun (HL800 Series).....	1
34	00-067904	Gear - Sun (HL1400 Series).....	1
35	RR-004-14	Retaining Ring (HL800 Series).....	1
36	RR-011-96	Retaining Ring (HL1400 Series).....	1
37	WL-003-48	Lockwasher 5/16 High Collar.....	6
38	SC-123-75	Cap Screw 5/16-18 x 3/4 Socket Fil. Hd.....	6
39	00-917804	Seal - Oil.....	1

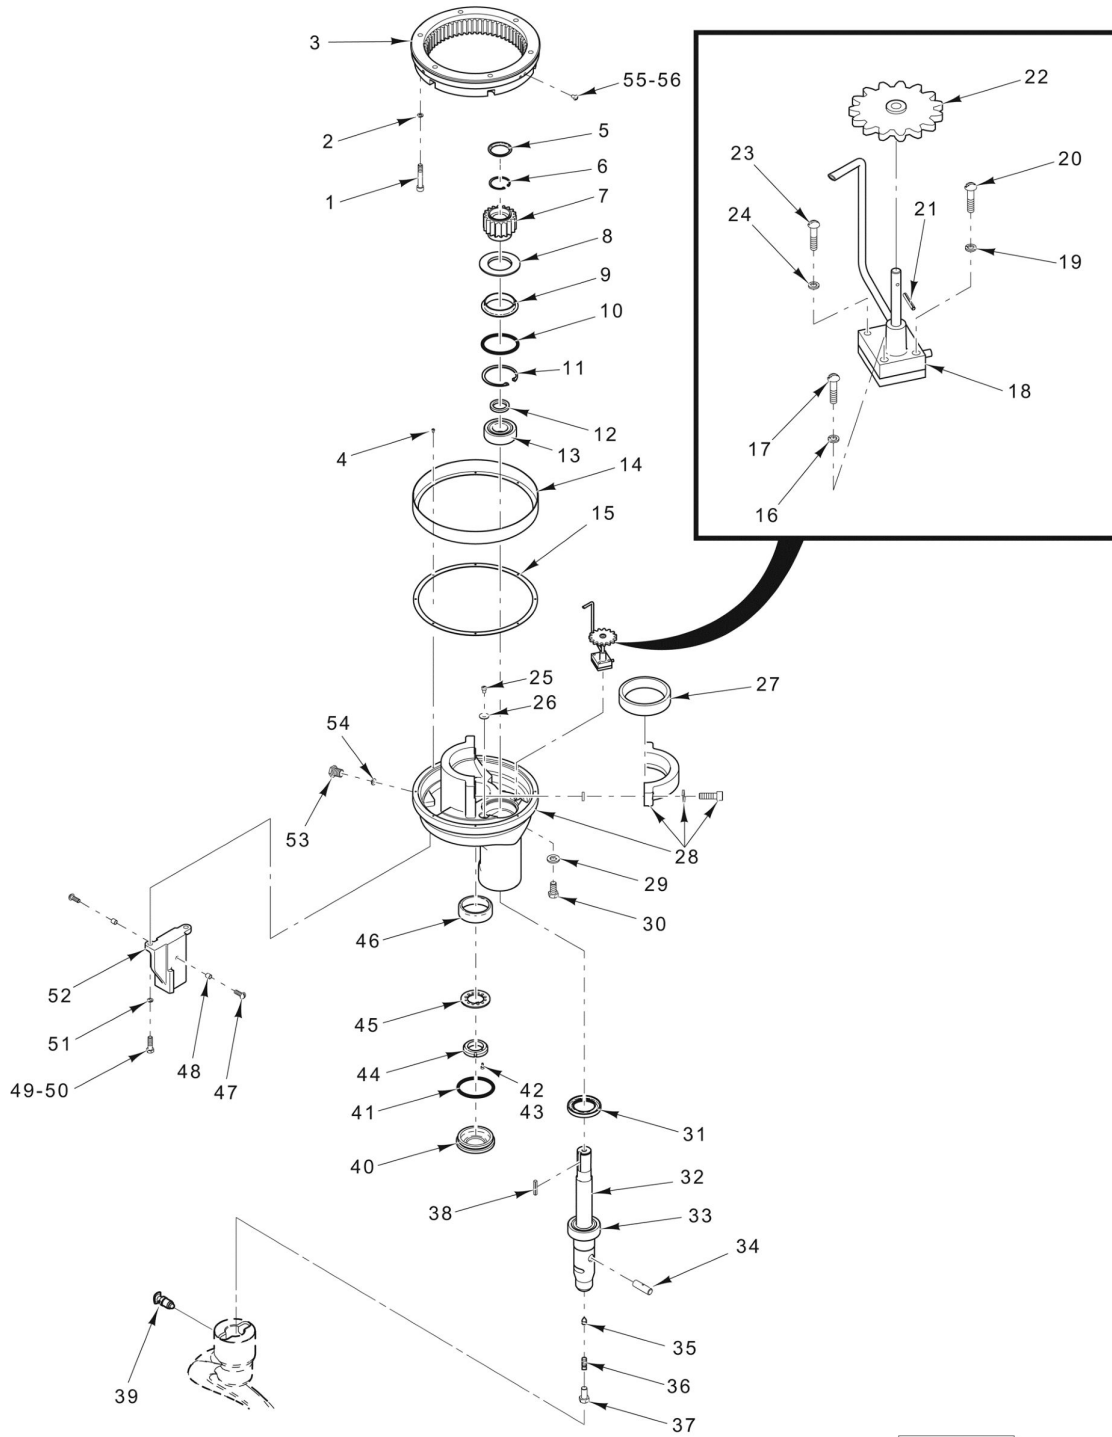


PL-60157

**PLANETARY
(HL800 SERIES)**

**PLANETARY
(HL800 SERIES)**

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-60157			
1	SC-040-27	Cap Screw 3/8-16 x 2-1/4 Hex Socket Hd.....	6
2	WL-019-92	Lockwasher 3/8 Helical.....	6
3	00-438121	Gear - Internal (59T).....	1
4	SC-009-70	Mach. Screw 6-32 x 1/4 Slotted Rd. Hd.....	8
5	00-060071	Cap - Oil Retaining.....	1
6	RR-005-08	Retaining Ring.....	1
7	00-064732	Internal Pinion & Deflector Assy. (18T) (Incls. Item 8).....	1
8	00-065372	NLA - Obsolete--Deflector - Oil.....	1
9	00-073011	Baffle - Planetary Oil.....	1
10	00-067500-00021	O-Ring.....	1
11	RR-004-24	Retaining Ring.....	1
12	00-065408	Spacer - Agitator Shaft.....	1
13	BB-006-36	Ball Bearing.....	1
14	00-064478	Extension.....	1
15	00-064464	Gasket.....	1
16	WL-003-22	Lockwasher #10 Light.....	2
17	SC-081-17	Mach. Screw 10-32 x 1 Slotted Rd. Hd. (SST).....	2
18	00-290232-00001	Housing & Tubing Assy. (Incls. Items 19 thru 24).....	1
19	WL-003-22	Lockwasher #10 Light.....	1
20	SC-060-87	Mach. Screw 10-32 x 3/4 Slotted Rd. Hd. (SST).....	1
21	RP-002-08	Roll Pin 5/64 Dia. x 11/16 Lg.....	1
22	00-064614	Gear - Drive Assy.....	1
23	SC-009-68	Mach. Screw 8-32 x 3/4 Slotted Rd. Hd.....	1
24	WL-003-15	Lockwasher #8 Light.....	1
25	SC-062-20	Cap Screw 1/4-20 x 3/8 Hex Hd.....	2
26	WS-003-46	Washer.....	2
27	BR-002-14	Roller Bearing - Cup & Cone Assy.....	1
28	00-916068-00002	Planetary Assy. (Incls. Bearing Cap).....	1
29	WS-021-20	Washer.....	1
30	SC-129-38	Cap Screw 7/16-20 x 1 Hex Hd. (SST).....	1
31	00-916065	Seal - Oil.....	1
32	00-916048	Shaft - Agitator (Incls. Item 33).....	1
33	BB-007-39	Ball Bearing - M.R.C. #207-SZZ.....	1
34	00-873953	Pin - Agitator Shaft.....	1
35	00-007744	Set Screw Hlds., Cone Pt.....	1
36	SC-047-41	Set Screw 3/8-16 x 3/8 Hex Hlds., Cup Pt.....	1
37	00-064723	Plug - Agitator Shaft.....	1
38	00-875958	Key - Chamfered.....	1
39	00-874145	Plunger Assy.....	1
40	00-437496-00002	Cap - Seal (Painted).....	1
41	00-067500-00021	O-Ring.....	1
42	00-065277	Cap Screw Socket Hd.....	1
43	WL-003-15	Lockwasher #8 Light.....	1
44	00-065275	Bearing - Special Lock Nut.....	1
45	00-064982	Washer - Tongue.....	1
46	BR-002-15	Roller Bearing - Cup & Cone Assy.....	1
47	SC-021-54	Mach. Screw 5/16-18 x 7/8 Slotted Rd. Hd. (SST).....	2
48	00-874181	Spacer - Scraper Arm.....	2
49	SC-041-31	Cap Screw 3/8-16 x 1-1/4 Hex Hd. (SST).....	1
50	SC-041-49	Cap Screw 3/8-16 x 1 Hex Hd. (SST).....	1
51	WL-006-28	Lockwasher 3/8 Helical.....	2
52	00-873284-00002	Bracket - Bowl Scraper.....	1
53	00-064465-00001	Plug - Oil Fill.....	1
54	WS-021-20	Washer.....	1
55	SC-021-39	Mach. Screw 1/4-20 x 5/8 Slotted Rd. Hd. (SST) (ML-141074).....	3
56	SC-128-80	Mach. Screw 1/4-20 x 3/8 Tx. Button Hd. (SST) (ML-141077).....	3

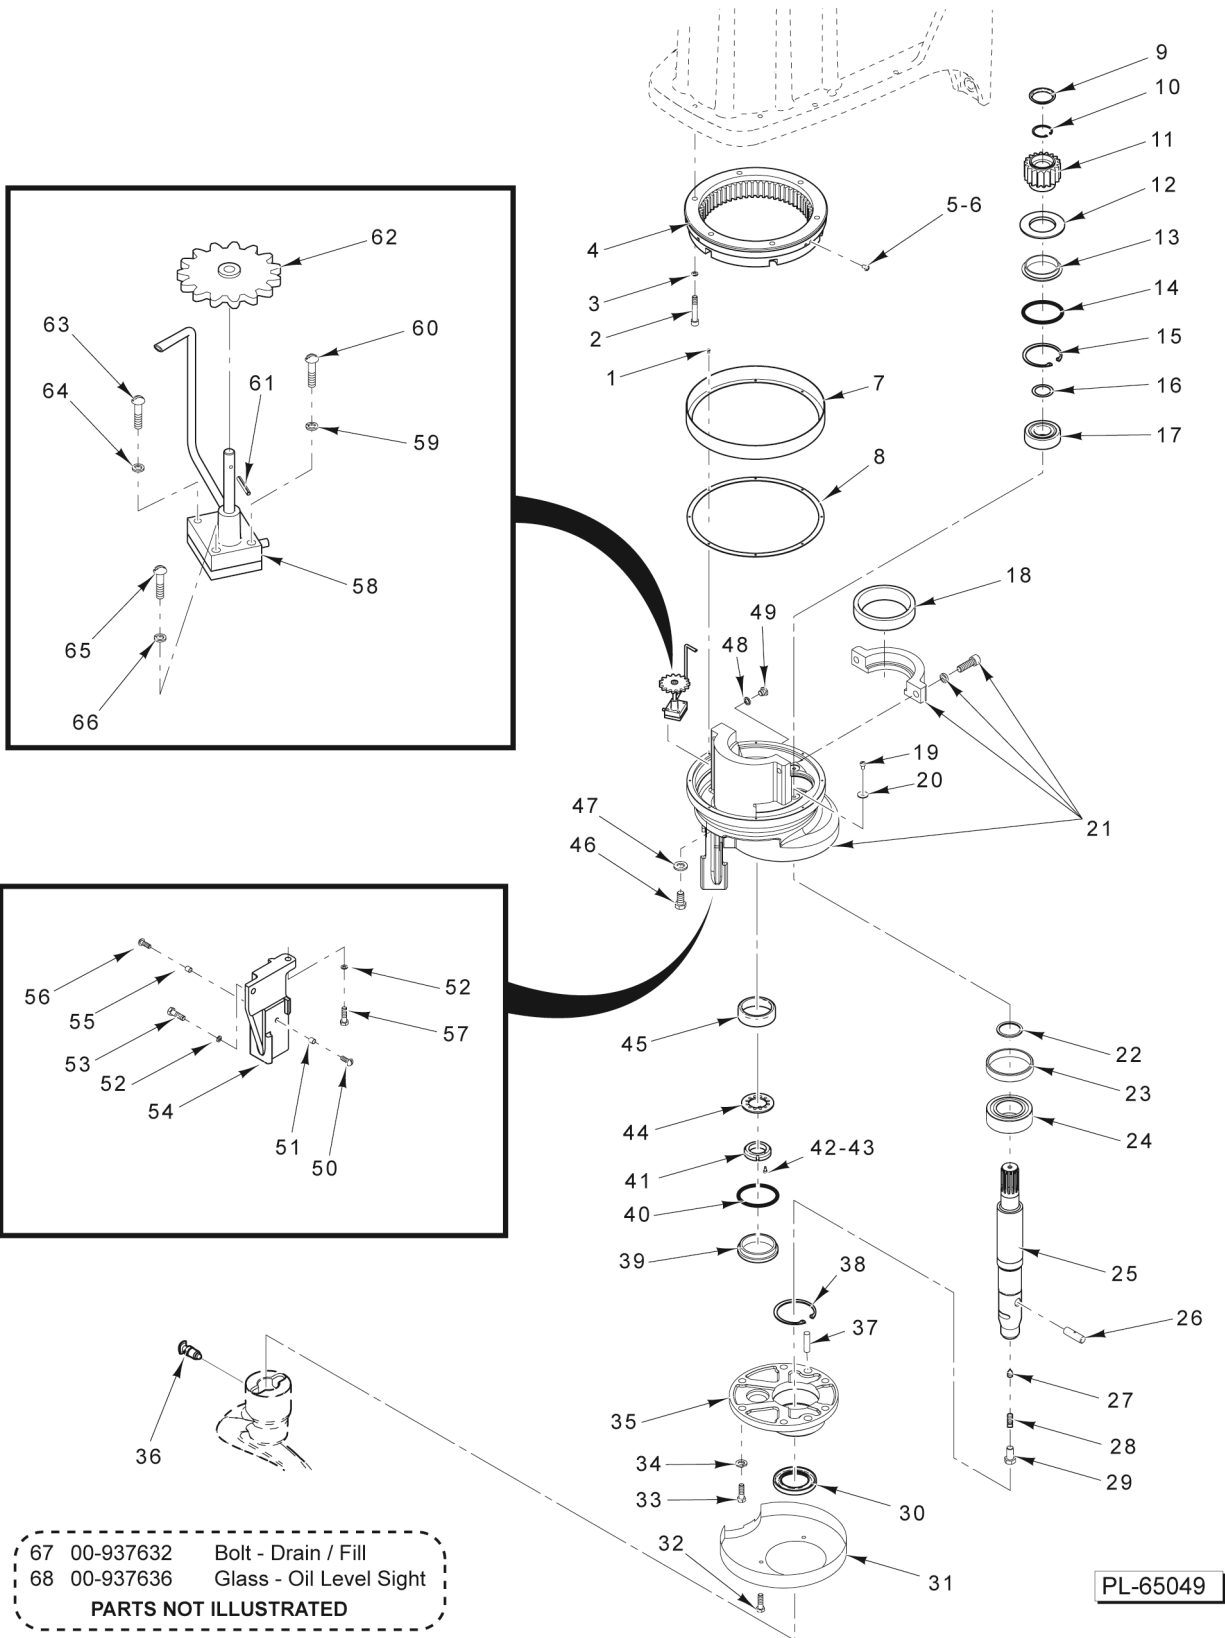

67 00-937632 Bolt - Drain / Fill
 68 00-937636 Glass - Oil Level Sight
PARTS NOT ILLUSTRATED

PL-65049

**PLANETARY
 (HL1400 SERIES)**


**PLANETARY
(HL1400 SERIES)**

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-PL-65049			
1	SC-009-70	Mach. Screw 6-32 x 1/4 Slotted Rd. Hd.....	8
2	SC-040-28	Cap Screw 3/8-16 x 2-1/2 Hex Socket Hd.....	6
3	WL-019-92	Lockwasher 3/8 Helical.....	6
4	00-438050	Gear - Internal.....	1
5	SC-021-37	Mach. Screw 1/4-20 x 3/8 Slotted Rd. Hd. (SST).....	3
6	SC-128-80	Mach. Screw 1/4-20 x 3/8 Tx. Button Hd. (SST) (ML-141081).....	3
7	00-064478	Extension.....	1
8	00-064464	Gasket.....	1
9	00-060071	Cap - Oil Retaining.....	1
10	RR-006-08	Retaining Ring.....	1
11	00-067886	Pinion - Internal (18T) (Incls. Item 12).....	1
12	00-065372	NLA - Obsolete--Deflector - Oil.....	1
13	00-073011	Baffle - Planetary Oil.....	1
14	00-067500-00021	O-Ring.....	1
15	RR-004-24	Retaining Ring.....	1
16	00-068277	Shim - Internal Pinion.....	1
17	BB-021-56	Bearing - Ball.....	1
18	BR-002-31	Roller Bearing - Cup & Cone Assy.....	1
19	SC-062-20	Cap Screw 1/4-20 x 3/8 Hex Hd.....	2
20	WS-003-46	Washer.....	2
21	00-874690-00002	Planetary Assy. (Incls. Bearing Cap) (Must Also Order Items 67 & 68).....	1
22	00-067902	Spacer - Agitator Shaft.....	1
23	00-067903	Locator - Bearing.....	1
24	BB-021-55	Bearing - Ball.....	1
25	00-916037	Shaft - Agitator.....	1
26	00-873953	Pin - Agitator Shaft.....	1
27	00-007744	Set Screw Hlds., Cone Pt.....	1
28	SC-047-41	Set Screw 3/8-16 x 3/8 Hex Hlds., Cup Pt.....	1
29	00-064723	Plug - Agitator Shaft.....	1
30	00-068045	Seal - Planetary Oil.....	1
31	00-874669	Cover - Planetary.....	1
32	00-080531	Screw - Nylok Hex Hd.....	2
33	SC-120-28	Cap Screw 1/2-13 x 2 Hex Hd.....	6
34	WL-004-11	Lockwasher 1/2 Helical.....	6
35	00-067921-00001	Plate - Bearing.....	1
36	00-874145	Plunger Assy.....	1
37	00-011800-00237	Dowel.....	2
38	RR-006-07	Retaining Ring.....	1
39	00-437496-00002	Cap - Seal (Painted).....	1
40	00-067500-00021	O-Ring.....	1
41	00-065275	Bearing - Special Lock Nut.....	1
42	00-065277	Cap Screw Socket Hd.....	1
43	WL-003-15	Lockwasher #8 Light.....	1
44	00-064982	Washer - Tongue.....	1
45	BR-002-15	Roller Bearing - Cup & Cone Assy.....	1
46	SC-129-38	Cap Screw 7/16-20 x 1 Hex Hd. (SST).....	1
47	WS-021-20	Washer.....	1
48	WS-021-20	Washer.....	1
49	00-064465-00001	Plug - Oil Fill.....	1
50	SC-021-54	Mach. Screw 5/16-18 x 7/8 Slotted Rd. Hd. (SST).....	1
51	00-874181	Spacer - Scraper Arm.....	1
52	WL-006-28	Lockwasher 3/8 Helical.....	2
53	SC-041-49	Cap Screw 3/8-16 x 1 Hex Hd. (SST).....	1
54	00-874649-00002	Bracket - Bowl Scraper.....	1
55	00-874181	Spacer - Scraper Arm.....	1

**PLANETARY
(HL1400 SERIES)**

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-PL-65049			
56	SC-021-54	Mach. Screw 5/16-18 x 7/8 Slotted Rd. Hd. (SST).....	1
57	SC-041-31	Cap Screw 3/8-16 x 1-1/4 Hex Hd. (SST).....	1
58	00-290232-00002	Pump Assy. - Oil (Incls. Items 59, 60, & 61).....	1
59	WL-003-22	Lockwasher #10 Light.....	1
60	SC-060-87	Mach. Screw 10-32 x 3/4 Slotted Rd. Hd. (SST).....	1
61	RP-002-08	Roll Pin 5/64 Dia. x 11/16 Lg.....	1
62	00-064614	Gear - Drive Assy.....	1
63	SC-009-68	Mach. Screw 8-32 x 3/4 Slotted Rd. Hd.....	1
64	WL-003-15	Lockwasher #8 Light.....	1
65	SC-081-17	Mach. Screw 10-32 x 1 Slotted Rd. Hd. (SST).....	2
66	WL-003-22	Lockwasher #10 Light.....	2
67	00-937632	Bolt - Drain / Fill (Order with Item 21).....	1
68	00-937636	Glass - Oil Level Sight Glass (Order with Item 21).....	1


NOTES

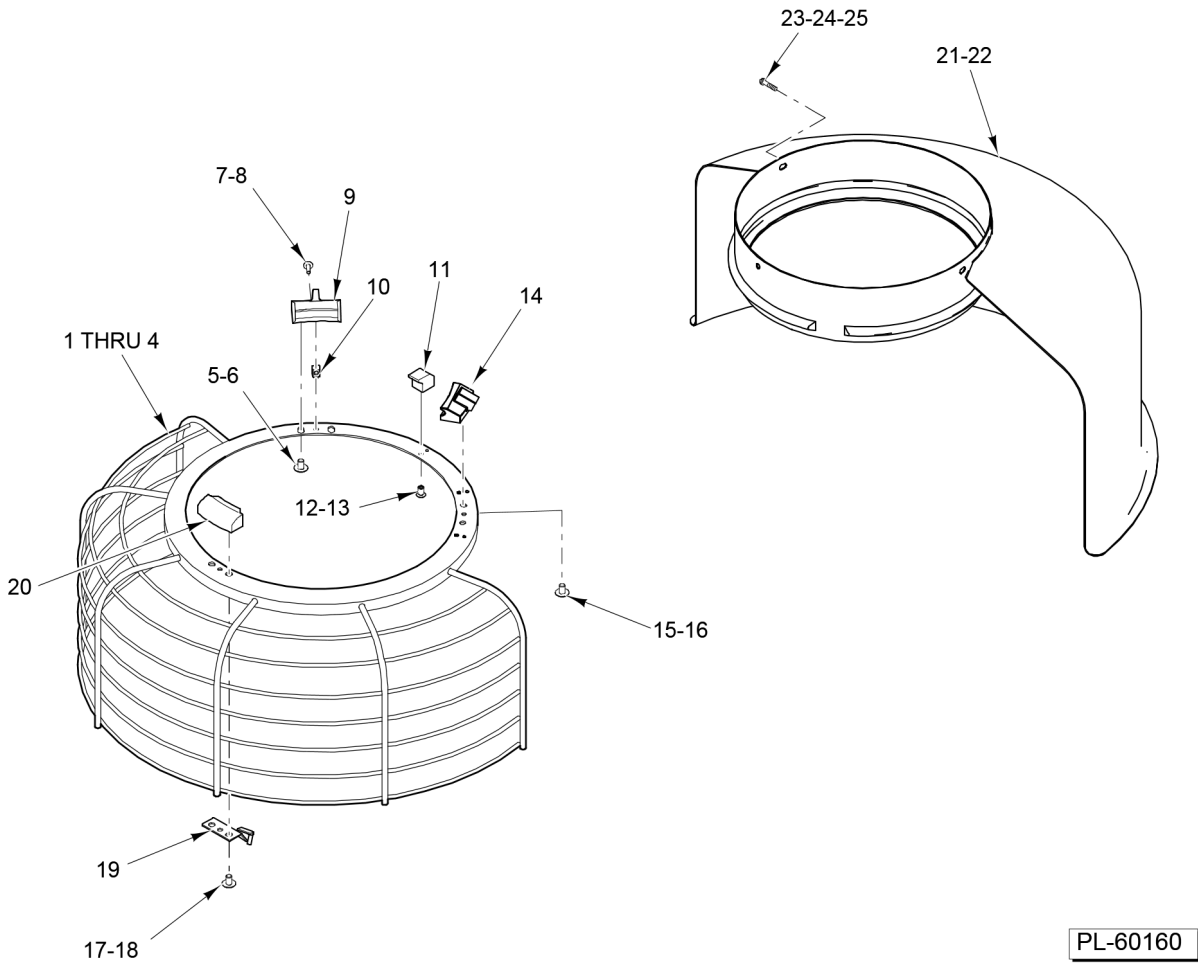


BOWL GUARD

BOWL GUARD

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-60160			
1	00-916154-00001	Wire Cage Assy. (ML-141074) (Incls. Items 5, 7, 9 thru 12, 14, 15, 17, 19, & 20).....	1
2	00-916154-00002	Wire Cage Assy. (ML-141077) (Incls. Items 6, 8 thru 11, 13, 14, 16, 18, 19, & 20).....	1
3	00-916277-00001	Wire Cage Assy. (ML-141078, ML-141082, ML-141084, ML-141102, ML-141111, ML-141113, ML-141114) (Incls. Items 5, 7, 9 thru 12, 14, 15, 17, 19, & 20).....	1
4	00-916277-00002	Wire Cage Assy. (ML-141081) (Incls. Items 6, 8 thru 11, 13, 14, 16, 18, 19, & 20).....	1
5	SC-122-45	Mach. Screw 1/4-20 x 3/8 Slotted Truss Hd.....	2
6	SC-128-65	Mach. Screw 1/4-20 x 1/2 Tx. Button Hd. (SST) (ML-141077 & ML-141081).....	2
7	SC-123-07	Mach. Screw 8-32 x 1/2 Slotted Truss Hd.....	1
8	SC-128-66	Mach. Screw 8-32 x 3/8 Tx. Button Hd. (SST) (ML-141077 & ML-141081).....	1
9	00-437433-00003	Shoe - Adjustable.....	1
10	00-437720	Key - Shoe.....	1
11	00-438055	Bumper - Cage.....	1
12	SC-122-44	Mach. Screw 8-32 x 3/8 Slotted Truss Hd.....	1
13	SC-121-71	Mach. Screw 8-32 x 3/8 Tx. Button Hd. (ML-141077 & ML-141081).....	1
14	00-874127	Shoe - Fixed (Incls. Magnet).....	1
15	SC-122-45	Mach. Screw 1/4-20 x 3/8 Slotted Truss Hd.....	2
16	SC-128-65	Mach. Screw 1/4-20 x 1/2 Tx. Button Hd. (SST) (ML-141077 & ML-141081).....	2
17	SC-122-45	Mach. Screw 1/4-20 x 3/8 Slotted Truss Hd.....	2
18	SC-128-65	Mach. Screw 1/4-20 x 1/2 Tx. Button Hd. (SST) (ML-141077 & ML-141081).....	2
19	00-875795	Stop - Cage.....	1
20	00-874126	Shoe - Front.....	1
21	00-916152	Guard - Splash & Drip (HL800 Series).....	1
22	00-874951	Splash Guard & Drip Cup (V1401 Series) (HL1400 Series).....	1
23	SC-021-39	Mach. Screw 1/4-20 x 5/8 Slotted Rd. Hd. (SST) (ML-141074)	3
24	SC-021-37	Mach. Screw 1/4-20 x 3/8 Slotted Rd. Hd. (SST) (ML-141078, ML-141082, ML-141084, ML-141102, ML-141111, ML-141113, & ML-141114,)	3
25	SC-128-80	Mach. Screw 1/4-20 x 3/8 Tx. Button Hd. (SST) (ML-141077 & ML-141081).....	3

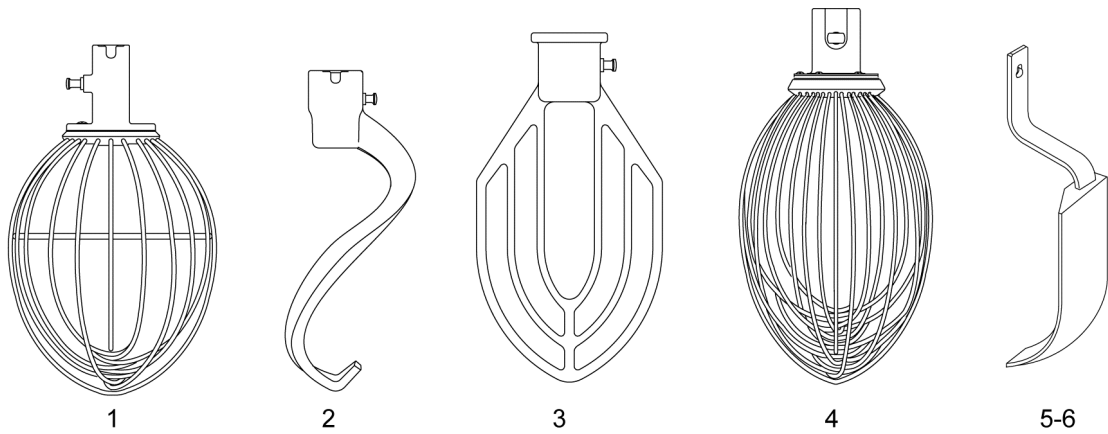

40-QUART AGITATORS

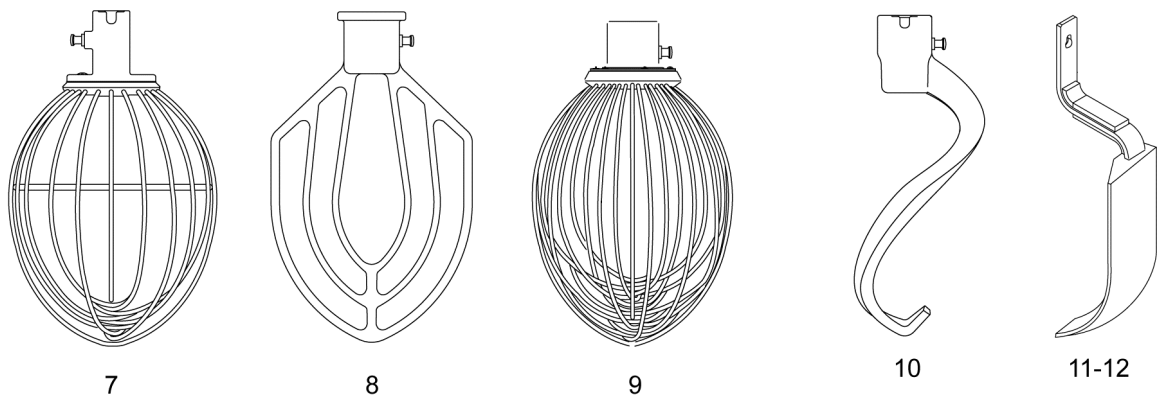

60-QUART AGITATORS



13-14

15-16

17

BOWL TRUCK


18 00-438047 Ingredient Chute (Packaged)
 19 00-937389 Bowl Truck (Packaged)
PARTS NOT ILLUSTRATED

PL-60161


**AGITATORS AND ACCESSORIES
 (40 & 60 QUART)**

**AGITATORS AND ACCESSORIES
(40 & 60 QUART)**


ILLUS. PL-60161	PART NO.	NAME OF PART	AMT.
1	00-916321	"I" Wire Whip (40 Quart) (Packaged) (Incls. Item 17).....	1
2	00-916316	"ED" Dough Arm (40 Quart) (Packaged) (Incls. Item 17).....	1
3	00-916313	"B" Flat Beater (40 Quart) (Packaged) (Incls. Item 17).....	1
4	00-916319	"D" Wire Whip (40 Quart) (Packaged) (Incls. Item 17).....	1
5	00-874268	Bowl Scraper (40 Quart) (Packaged) (Incls. Item 6).....	1
6	00-435637-00004	Scraper - Bowl (40 Qt.).....	1
7	00-916268	"I" Wire Whip (60 Quart) (Packaged) (Incls. Item 17).....	1
8	00-916257	"B" Flat Beater (60 Quart) (Packaged) (Incls. Item 17).....	1
9	00-916265	"D" Wire Whip (60 Quart) (Packaged) (Incls. Item 17).....	1
10	00-916260	"ED" Dough Arm (60 Quart) (Packaged) (Incls. Item 17).....	1
11	00-874267	Bowl Scraper (60 Quart) (Packaged) (Incls. Item 12).....	1
12	00-435637-00001	Scraper - Bowl (60 Qt.).....	1
13	00-916493	Bowl Truck Adapter (60-80-140 Quart) (Packaged).....	1
14	00-916495	Bowl Truck Adapter (40-60 Quart) (Packaged).....	1
15	ML-141087-0000Z	Bowl Truck Assy (60-140 Quart).....	1
16	00-874288	Caster (4 In.) (Bowl Truck).....	3
17	00-874145	Plunger Assy.....	1
18	00-438047	Ingredient Chute (Packaged).....	1
19	00-937389	Bowl Truck.....	1

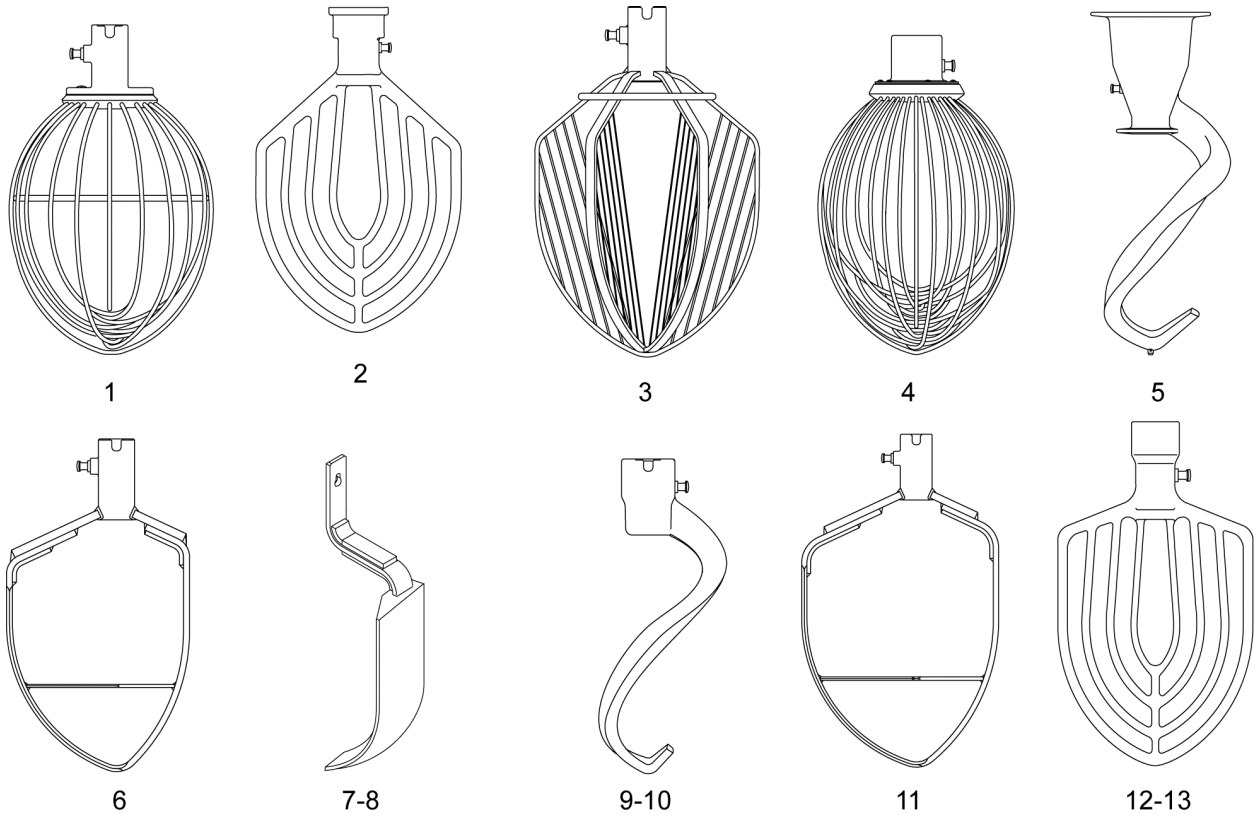

80-QUART AGITATORS

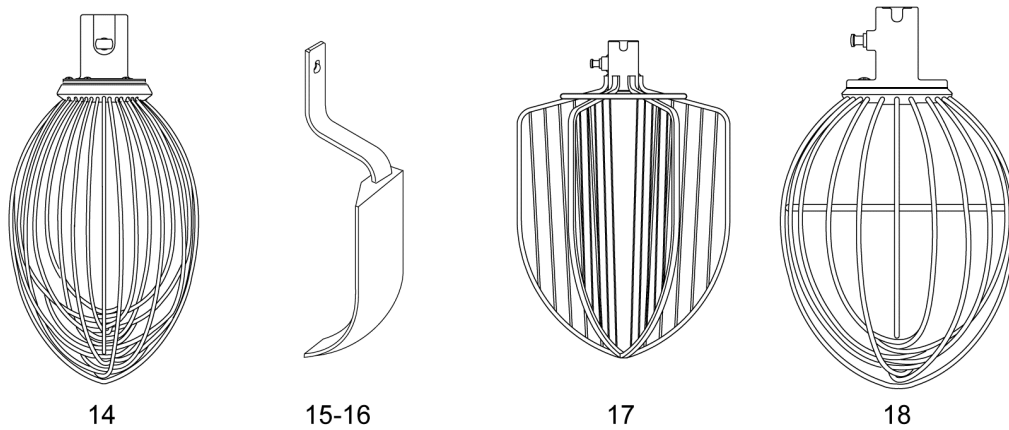

140-QUART AGITATORS

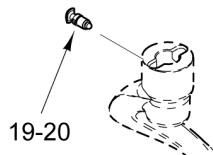


PL-60162



**AGITATORS AND ACCESSORIES
(80 & 140 QUART)**

**AGITATORS AND ACCESSORIES
(80 & 140 QUART)**

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-60162			
1	00-875931	"I" Wire Whip (80 Quart) (Packaged) (Incls. Item 19).....	1
2	00-874654	"B" Beater (80 Quart) (Packaged) (Incls. Item 19).....	1
3	00-875946	"C" Wire Whip (80 Quart) (Packaged) (Incls. Item 19).....	1
4	00-875866	"D" Wire Whip (80 Quart) (Packaged) (Incls. Item 19).....	1
5	00-874647	"ED" Dough Arm (80 Quart) (Packaged) (Incls. Item 19).....	1
6	00-875914	Pastry Knife (80 Quart) (Packaged) (Incls. Item 19).....	1
7	00-874700	Bowl Scraper (80 Quart) (Packaged) (Incls. Item 8).....	1
8	00-435637-00002	Scraper - Bowl (80 Qt.).....	1
9	00-875847	"ED" Dough Arm (140 Quart) (Packaged) (Incls. Item 19).....	1
10	00-916316	"ED" Dough Arm (40 Quart) (Packaged) (Incls. Item 19).....	1
11	00-875906	Pastry Knife (140 Quart) (Packaged) (Incls. Item 19).....	1
12	00-874409	"B" Flat Beater (Alum.) (140 Quart) (Packaged) (Incls. Item 19).....	1
13	00-937382	"B" Flat Beater (SST) (140 Quart) (Packaged) (Incls. Item 20).....	1
14	00-875863	"D" Wire Whip (140 Quart) (Packaged) (Incls. Item 19).....	1
15	00-874699	Bowl Scraper (140 Quart) (Packaged) (Incls. Item 16).....	1
16	00-435637-00003	Scraper - Bowl (140 Quart).....	1
17	00-875938	"C" Wire Whip (140 Quart) (Packaged) (Incls. Item 19).....	1
18	00-875929	"I" Wire Whip (140 Quart) (Packaged).....	1
19	00-874145	Plunger Assy.....	1
20	00-937460	Plunger Assy (SST).....	1

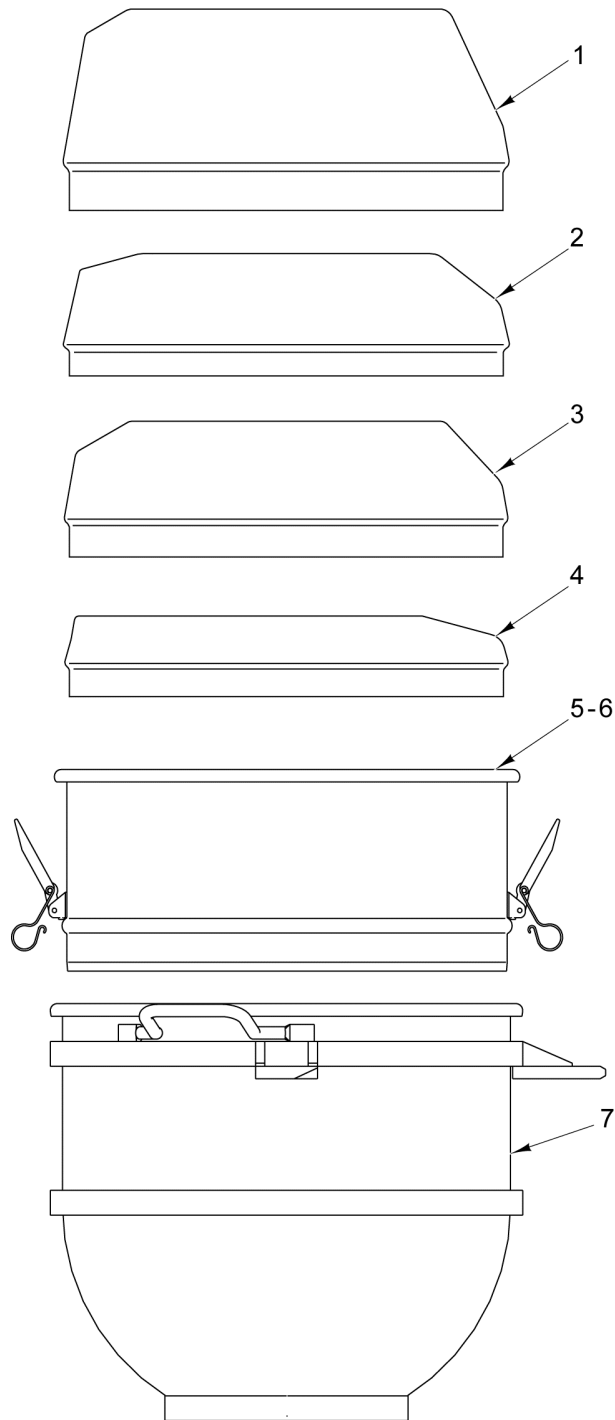

- 15 00-917344 Bowl Adapter Assy. (140-80 Quart)
 - 16 00-917345 Bowl Adapter Assy. (80-60 Quart)
 - 17 00-917346 Bowl Adapter Assy. (80-40 Quart)
- PARTS NOT ILLUSTRATED**

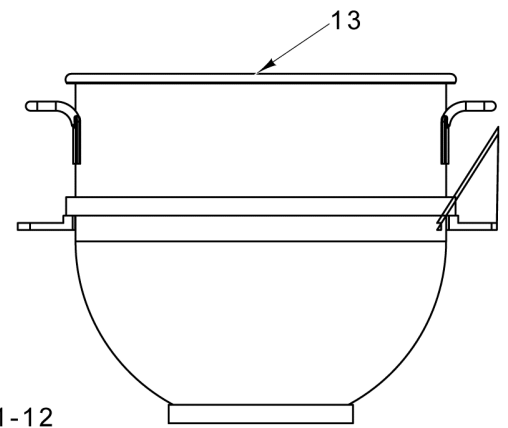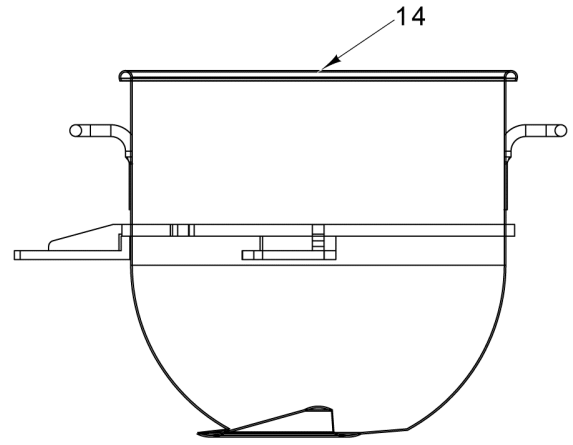


PL-60163

BOWL AND EXTENSIONS

BOWL AND EXTENSIONS

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-60163			
1	00-438081	Splash Cover (40 Quart) (Packaged).....	1
2	00-438082	Splash Cover (60 Quart) (Packaged).....	1
3	00-438083	Splash Cover (80 Quart) (Packaged).....	1
4	00-438084	Splash Cover (140 Quart) (Packaged).....	1
5	00-438104-00004	Bowl Extension Assy. (60 Quart) (Packaged).....	1
6	00-438104-00002	Bowl Extension Assy. (80 Quart) (Packaged).....	1
7	00-916175	Bowl Assy. (40 Quart) (Packaged) (All HL800 & HL1400 excep HL1400N).....	1
8	00-916174	Bowl Assy. (60 Quart) (Packaged) (All HL800 & HL1400 excep HL1400N).....	1
9	00-875846	Bowl Assy. (80 Quart) (Packaged) (All HL800 & HL1400 excep HL1400N).....	1
10	00-275690	Bowl Assy. (80 Quart) (Costco) (ML-141082, ML-141084, & ML-141102).....	1
11	00-875845	Bowl Assy. (140 Quart) (SST) (Packaged) (All HL1400 except HL1400N).....	1
12	00-917142	Bowl Assy. (140 Quart) (Costco) (HL1400N).....	1
13	00-937930	Bowl Assy. (80 Quart) (Non-Swing Out) (SST) (ML-141111, ML-141113, & ML-141114).....	1
14	00-937934	Bowl Assy. (40 Quart) (SST) (ML-141111, ML-141113, & ML-141114).....	1
15	00-917344	Bowl Adapter Assy. (140-80 Quart) (Packaged).....	1
16	00-917346	Bowl Adapter Assy. (80-40 Quart) (Packaged).....	1
17	00-917345	NLA - Obsolete--Bowl Adapter Assy. (80-60 Quart) (Packaged).....	1

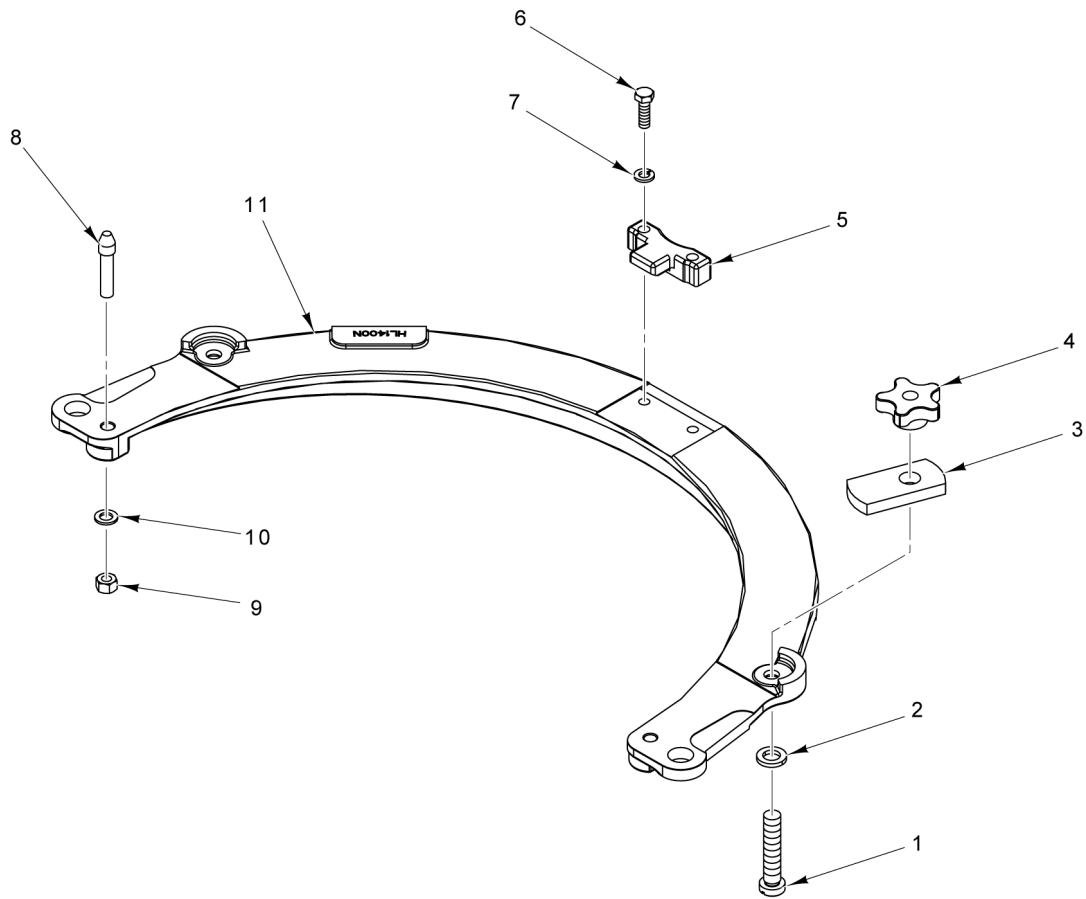

PL-60164

BOWL ADAPTER ASSEMBLY (ML-141084)

BOWL ADAPTER ASSEMBLY (ML-141084)

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-60164			
1	00-022196	Bolt - Bowl Lock.....	2
2	WL-004-11	Lockwasher 1/2 Helical.....	2
3	00-065532-00001	Clamp - Bowl Adapter (Painted).....	2
4	00-008101-00001	Knob - Clamp Stud (Tinned).....	2
5	00-021020	Retainer - Bowl.....	1
6	SC-120-38	Cap Screw 5/16-18 x 1 Hex Hd.....	2
7	WL-003-47	Lockwasher 5/16 Helical.....	2
8	00-062110	Stud - Bowl Locating.....	2
9	NS-013-25	Nut 3/8-16 Hex.....	2
10	WL-004-04	Lockwasher 3/8 Helical.....	2
11	00-917344	Bowl Adapter Assy. (140-80 Quart) (Packaged) (Incls. Items 1 thru 10).....	1

